



BIS VISTA™ Monitoring System

OPERATING MANUAL



© Copyright, 2005, Aspect Medical Systems, Inc. All rights reserved. Copying or other reproduction of this document is prohibited without prior written consent of Aspect Medical Systems, Inc.

Aspect Medical Systems, Inc.
141 Needham St.
Newton, MA 02464
U.S.A.
(Tel) 617-559-7000
(Tel) 888-BIS INDE(X) (U.S. only)
(Fax) 617-559-7400
bis_info@aspectms.com
www.aspectmedical.com

EC REP

Aspect Medical Systems International B.V.
Rijnzathe 7d2
3454 PV De Meern
The Netherlands
Tel: +31.30.662.9140
Fax: +31.30.662.9150
amsint@aspectms.com



0123

TABLE OF CONTENTS

ABOUT THIS MANUAL.....	i
INTRODUCING THE BIS VISTA MONITORING SYSTEM.....	ii
I SAFETY PRECAUTIONS.....	I-1
I.1 Warnings.....	I-1
I.2 Cautions.....	I-3
I.3 Key to Symbols	I-6
2 INSTALLATION AND PREPARATION FOR USE	2-1
2.1 BIS VISTA Monitor Installation and Checkout	2-1
2.2 Environment.....	2-2
2.2.1 Shipping and Storage Environment.....	2-2
2.2.2 Operating Environment	2-2
2.2.3 Power Requirements and System Grounding.....	2-3
2.2.4 Electromagnetic Compatibility Requirements.....	2-3
2.2.5 Site Preparation: Mounting the Monitor	2-4
2.2.5.1 Mounting the Monitor using the Pole Clamp.....	2-4
2.2.5.2 Optional Mounting Accessories.....	2-5
2.3 The BIS VISTA Monitoring System – Equipment and Supplies	2-6
2.3.1 The BIS VISTA Monitor	2-7
2.3.1.1 Front Panel.....	2-7
2.3.1.2 Touch Screen	2-7
2.3.1.3 ON/Standby button	2-7
2.3.1.4 Rear Panel	2-7
2.3.1.5 Integral Battery	2-9
2.3.2 BISx	2-10
2.3.3 Patient Interface Cable (PIC).....	2-11
2.3.4 BIS Sensors	2-11
2.4 Cable Connections.....	2-11
2.5 Start Procedure	2-12
2.5.1 Starting the Monitor for the First Time	2-12
2.5.2 Starting the Monitor from Standby Mode.....	2-12
2.6 Initial Menu Settings.....	2-12
2.6.1 Language Selection.....	2-13
2.6.2 Date and Time	2-13
2.6.3 View/Save Settings.....	2-13

3	OPERATING THE BIS VISTA MONITORING SYSTEM.....	3-1
3.1	Preparing for Operation	3-1
3.2	The Sensor Check.....	3-3
3.3	The BIS Trend Data Screen	3-5
3.3.1	The BIS (Bispectral Index) Value.....	3-5
3.3.2	Signal Quality Indicator	3-6
3.3.3	The Electromyograph (EMG) Indicator	3-6
3.3.4	The EEG Waveform Display.....	3-6
3.3.5	The Message Region.....	3-6
3.3.6	The BIS Trend Graph.....	3-6
3.3.7	Additional Screen Information	3-8
3.3.7.1	The Battery Icon.....	3-8
3.3.7.2	Extend Mode	3-8
3.3.7.3	The Suppression Ratio (SR) Number.....	3-8
3.3.7.4	The Burst Count (Bursts/Minute) – Extend Mode Only	3-8
3.4	BIS Trend Data Screen Touch Keys.....	3-9
3.5	Menu Selections	3-11
3.5.1	Target Range.....	3-11
3.5.2	Secondary Variable	3-12
3.5.3	Chart Data.....	3-13
3.5.4	Alarm Volume.....	3-14
3.5.5	BIS/EEG Display Modes.....	3-15
3.5.6	View/Save Settings.....	3-15
3.5.7	Snapshot.....	3-16
3.5.8	Display Suppression Ratio (SR)	3-17
3.5.9	Monitor Mode.....	3-17
3.5.10	Export Data	3-18
3.5.11	BIS Smoothing Rate.....	3-19
3.5.12	Configuration Information	3-20
3.5.13	EEG Channels	3-20
3.5.14	Date and Time.....	3-21
3.5.15	Language	3-22
3.5.16	Filters.....	3-23
3.5.17	Impedance Checking	3-23
3.5.18	Maintenance Menu.....	3-24
3.5.19	Demo Case	3-24
3.5.20	Diagnostic Menu	3-24
3.6	Reviewing Stored Trend Data.....	3-25
3.7	The EEG Display	3-26
3.8	Ending a Case	3-26
3.9	Data Transfer	3-26
4	QUICK REFERENCE GUIDE	4-1

5 FEATURES AND CAPABILITIES 5-1

5.1 How the BIS VISTA Monitoring System Works..... 5-1

5.2 System Features 5-2

5.2.1 Bispectral Index (BIS) 5-2

5.2.2 Signal Quality Indicator (SQI)..... 5-3

5.2.3 Electromyograph (EMG) Indicator 5-3

5.2.4 Suppression Ratio (SR)..... 5-3

5.2.5 Burst Count (Bursts/Minute)..... 5-3

5.2.6 BIS Trend and Secondary Trend Graph..... 5-3

5.2.7 Electroencephalogram (EEG) Waveform Display 5-4

5.2.8 EEG Channels..... 5-4

5.2.9 Filters 5-4

5.2.10 Artifact Detection..... 5-4

5.2.11 Chart Data 5-4

5.2.12 Target Range..... 5-4

5.2.13 BIS Trend Smoothing..... 5-5

5.2.14 Snapshot 5-5

5.2.15 Demo Case 5-5

5.2.16 Languages..... 5-5

5.2.17 Time/Date 5-5

5.2.18 Review Mode..... 5-5

5.2.19 Standby Mode..... 5-6

5.2.20 Monitor Mode 5-6

5.2.21 Saved Settings 5-7

5.2.22 System Alarms..... 5-7

5.2.23 System Messages..... 5-7

5.2.24 System Self-Checks..... 5-7

5.2.25 Data Memory..... 5-8

5.2.26 Battery Operation 5-9

5.2.27 Data Transfer 5-9

5.2.28 Software Upgrades 5-10

6 PREVENTIVE MAINTENANCE, CARE AND CLEANING..... 6-1

6.1 Care and Cleaning 6-1

6.2 Maintenance 6-2

6.2.1 Checking Cable Integrity 6-2

6.2.2 System Checkout 6-2

6.2.3 Checking the Battery..... 6-3

6.2.4 Replacing the Battery 6-4

6.2.5 Replacing the Power Supply..... 6-4

6.2.6 Checking Leakage Current..... 6-5

6.3 Technical Documentation 6-6

6.4 Instrument Identification..... 6-6

7	DIAGNOSTICS AND TROUBLESHOOTING	7-1
7.1	Maintenance Menu.....	7-1
7.1.1	Display BISx Connection History	7-1
7.1.2	Software Upgrade	7-1
7.1.3	Restore Default Settings for All Modes.....	7-2
7.1.4	Calibrate Touch Screen	7-2
7.2	The Diagnostic Menu.....	7-2
7.2.1.1	Diagnostic Codes	7-2
7.2.1.2	DSC Self Test.....	7-2
7.3	BIS VISTA System Messages and Corrective Actions	7-3
7.4	Using the Reset button	7-7
7.5	What to do if the BIS VISTA Monitoring System Requires Service.....	7-7
8	APPENDIX i: MENUS, PROCESSED VARIABLES AND GLOSSARY .	8-1
8.1	Menu Map	8-1
8.2	Menu Listing	8-2
8.3	Processed EEG Variables	8-5
8.4	Glossary.....	8-6
9	APPENDIX	9-1
9.1	Specifications.....	9-1
9.2	Electromagnetic Compatibility Specifications	9-5
9.2.1	Accessories.....	9-5
9.2.2	IEC 60601-1-2:2001 Electromagnetic Compatibility Guidance	9-6
9.3	Warranty	9-11
9.4	Software License Agreement.....	9-13
9.5	List of Patents	9-15

TABLE OF FIGURES

Figure 1 - Symbol Key (page 1 of 3)	1-6
Figure 2 - Pole Clamp.....	2-4
Figure 3 - The BIS VISTA Monitoring System.....	2-6
Figure 4 - Rear Panel.....	2-8
Figure 5 – The BISx.....	2-10
Figure 6 - Connecting the PIC.....	3-3
Figure 7 - The Sensor Check Graphic Screen with Impedance Values and Results.....	3-4
Figure 8 - Screen Features – The BIS Trend Data Screen.....	3-5
Figure 9 - BIS Trend Data Screen with Battery Icon, Target Range, SR, and Burst Count .	3-7
Figure 10 - The Alarm Touch Keys	3-9
Figure 11 – The Menu, Home, Sensor Check and Review Mode Touch Keys.....	3-10
Figure 12 - Target Range.....	3-11
Figure 13 - Secondary Variable	3-12
Figure 14 - Chart Data.....	3-13
Figure 15 - Alarm Volume.....	3-14
Figure 16 - BIS/EEG Display Modes	3-15
Figure 17 - View/Save Settings.....	3-15
Figure 18 - Snapshot.....	3-16
Figure 19 – Display SR.....	3-17
Figure 20 - Export Data.....	3-18
Figure 21 - Smoothing Rate.....	3-19
Figure 22 - Configuration Information.....	3-20
Figure 23 - EEG Channels	3-20
Figure 24 - Date and Time.....	3-21
Figure 25 - Language Menu.....	3-22
Figure 26 - Filters	3-23
Figure 27 - Impedance Checking ON/OFF.....	3-23
Figure 28 - Review Mode.....	3-25
Figure 29 - BIS Range Guidelines	5-2
Figure 30 - Monitor Mode Settings	5-6
Figure 31 - Replacing the Power Supply.....	6-4
Figure 32 - Diagnostic Codes ON/OFF.....	7-2
Figure 33 - BIS VISTA Menu Map	8-1

ABOUT THIS MANUAL

This Operating Manual contains all of the information you need to set up and operate the Aspect™ Medical Systems' BIS VISTA™ Monitoring System (Figure 3). It also includes specific cleaning and test procedures you may occasionally be required to perform. Although this manual is intended for trained medical personnel, it does not assume prior knowledge or experience with operator-programmable medical electronics devices.

Keep this Operating Manual with the BIS VISTA monitor for use by the operator. This manual is also intended to be a service information manual for service technicians or biomedical engineering personnel.

Before attempting to set up or use the BIS VISTA system, please familiarize yourself with the safety information provided in this section.

INTRODUCING THE BIS VISTA MONITORING SYSTEM

Indications for Use

The BIS VISTA Monitoring System is intended for use under the direct supervision of a licensed healthcare practitioner or by personnel trained in its proper use. The BIS VISTA Monitor is intended for use on adult and pediatric patients within a hospital or medical facility providing patient care to monitor the state of the brain by data acquisition of EEG signals.

The BIS™ may be used as an aid in monitoring the effects of certain anesthetic agents. Use of BIS monitoring to help guide anesthetic administration may be associated with the reduction of the incidence of awareness with recall in adults during general anesthesia and sedation.

Introduction

The BIS VISTA Monitoring System is a user-configurable patient monitoring system designed to monitor the hypnotic state of the brain based on acquisition and processing of EEG signals. The BIS VISTA system processes raw EEG signals to produce a single number, called the Bispectral Index™, or BIS, which correlates with the patient's level of hypnosis.

The BIS VISTA monitor display consists of:

- The current BIS number
- Trend graphs of processed EEG parameters
- Raw EEG waveforms in real time
- Various signal quality indicators (EMG, SQI)
- Suppression Ratio (if requested by the user)
- Burst Count number (when a BIS Extend Sensor is in use)
- Alarm Indicator and Messages.

The system performs self-tests to ensure that the monitor and its components are functioning properly and that impedance levels of patient sensors are within acceptable limits. Easy-to-use menus allow the user to change the data display and review stored data.

Important Information about Using BIS Monitoring

Clinical judgment should always be used when interpreting the BIS in conjunction with other available clinical signs. Reliance on the BIS alone for intraoperative anesthetic management is not recommended. As with any monitored parameter, artifacts and poor signal quality may lead to inappropriate BIS values. Potential artifacts may be caused by poor skin contact (high impedance), muscle activity or rigidity, head and body motion, sustained eye movements, improper sensor placement and unusual or excessive electrical interference. Due to limited clinical experience in the following applications, BIS values should be interpreted cautiously in patients with known neurological disorders, those taking other psychoactive medications and in children below the age of one.

SECTION 1

I SAFETY PRECAUTIONS

INTRODUCTION

Caution:

Carefully read this entire manual before using the monitor in a clinical setting.

WARNINGS, CAUTIONS, AND NOTES

The terms warning, caution, and note have specific meanings in this manual.

- A WARNING advises against certain actions or situations that could result in personal injury or death.
- A CAUTION advises against actions or situations that could damage equipment, produce inaccurate data, or invalidate a procedure, although personal injury is unlikely.
- A NOTE provides useful information regarding a function or procedure.

KEY TO SYMBOLS

A key to the symbols used on the BIS VISTA system appears at the end of this section.

1.1 Warnings

EXPLOSION HAZARD: DO NOT USE THE BIS VISTA SYSTEM IN A FLAMMABLE ATMOSPHERE OR WHERE CONCENTRATIONS OF FLAMMABLE ANESTHETICS MAY OCCUR.

MONITOR IS NOT DESIGNED FOR USE IN MRI ENVIRONMENT.

CONSIDERATIONS WHEN USING ELECTRO CONVULSIVE THERAPY (ECT) EQUIPMENT DURING BIS MONITORING:

- **SEPARATE ECT ELECTRODES FROM THE BIS SENSOR AS MUCH AS POSSIBLE TO MINIMIZE THE EFFECT OF INTERFERENCE.**
- **CERTAIN ECT EQUIPMENT MAY INTERFERE WITH THE PROPER FUNCTION OF THE BIS MONITORING SYSTEM. CHECK FOR COMPATIBILITY OF EQUIPMENT DURING PATIENT SETUP.**

FOR PROPER GROUNDING, THE POWER RECEPTACLE MUST BE A THREE-WIRE GROUNDED OUTLET. A HOSPITAL GRADE OUTLET IS

REQUIRED. NEVER ADAPT THE THREE-PRONG PLUG FROM THE MONITOR TO FIT A TWO-SLOT OUTLET. IF THE OUTLET HAS ONLY TWO SLOTS, MAKE SURE THAT IT IS REPLACED WITH A THREE-SLOT GROUNDED OUTLET BEFORE ATTEMPTING TO OPERATE THE MONITOR.

IF THE INTEGRITY OF THE EXTERNAL PROTECTIVE EARTH GROUND IS IN DOUBT, THE BIS VISTA SYSTEM SHALL BE OPERATED FROM ITS INTERNAL BATTERY POWER SOURCE ONLY.

FOR BIS VISTA SYSTEMS USED OUTSIDE OF NORTH AMERICA: A HARMONIZED LINE CORD WITH CONDUCTORS HAVING A CROSS SECTIONAL AREA GREATER THAN 0.75 mm² MUST BE USED.

BE SURE THE MONITOR IS MOUNTED SECURELY IN PLACE TO AVOID PERSONAL OR PATIENT INJURY.

WHEN CONNECTING EXTERNAL EQUIPMENT (e.g., DATA CAPTURE COMPUTER), THE SYSTEM LEAKAGE CURRENT MUST BE CHECKED AND MUST BE LESS THAN THE IEC 60601-1-1 LIMIT.

THE USE OF ACCESSORY EQUIPMENT NOT COMPLYING WITH THE EQUIVALENT SAFETY REQUIREMENTS OF THIS EQUIPMENT MAY LEAD TO A REDUCED LEVEL OF SAFETY OF THE RESULTING SYSTEM. CONSIDERATION RELATING TO THE CHOICE SHALL INCLUDE:

- **USE OF THE ACCESSORY IN THE PATIENT VICINITY**
- **EVIDENCE THAT THE SAFETY CERTIFICATION OF THE ACCESSORY HAS BEEN PERFORMED IN ACCORDANCE TO THE APPROPRIATE IEC 60601-1 AND/OR IEC 60601-1-1 HARMONIZED NATIONAL STANDARD.**

ENSURE THAT THE BIS_x[™] DOES NOT COME INTO PROLONGED CONTACT WITH PATIENT'S SKIN, AS IT MAY GENERATE HEAT AND CAUSE DISCOMFORT.

THE CONDUCTIVE PARTS OF ELECTRODES OR SENSOR AND CONNECTORS, INCLUDING THE NEUTRAL ELECTRODE, SHOULD NOT CONTACT OTHER CONDUCTIVE PARTS, INCLUDING EARTH.

TO REDUCE THE HAZARD OF BURNS IN THE HIGH-FREQUENCY SURGICAL NEUTRAL ELECTRODE CONNECTION, THE SENSOR OR ELECTRODES SHOULD NOT BE LOCATED BETWEEN THE SURGICAL SITE AND THE ELECTRO-SURGICAL UNIT RETURN ELECTRODE.

THE SENSOR MUST NOT BE LOCATED BETWEEN DEFIBRILLATOR PADS WHEN A DEFIBRILLATOR IS USED ON A PATIENT CONNECTED TO THE BIS VISTA SYSTEM.

TO MINIMIZE THE RISK OF PATIENT STRANGULATION, THE PATIENT INTERFACE CABLE (PIC) MUST BE CAREFULLY PLACED AND SECURED.

SHOCK HAZARD: DO NOT ATTEMPT TO DISCONNECT THE POWER CORD WITH WET HANDS. MAKE CERTAIN THAT YOUR HANDS ARE CLEAN AND DRY BEFORE TOUCHING THE POWER CORD.

UNIVERSAL PRECAUTIONS SHALL BE OBSERVED TO PREVENT CONTACT WITH BLOOD OR OTHER POTENTIALLY INFECTIOUS MATERIALS. PLACE CONTAMINATED MATERIALS IN REGULATED WASTE CONTAINER.

DO NOT MIX DISINFECTING SOLUTIONS (e.g., BLEACH AND AMMONIA), AS HAZARDOUS GASES MAY RESULT.

ELECTRICAL SHOCK HAZARD: DO NOT REMOVE MONITOR COVERS DURING OPERATION OR WHILE POWER IS CONNECTED TO MONITOR.

ELECTRICAL SHOCK HAZARD: THE MANUFACTURER'S INSPECTION OF THIS APPARATUS VERIFIED THAT THE GROUND LEAKAGE CURRENT AND THE PATIENT SAFETY CURRENT WERE LESS THAN THE SPECIFIED LIMITS ESTABLISHED BY THE APPLICABLE SAFETY STANDARDS. AS A MATTER OF SAFE PRACTICE, THE INSTITUTION SHOULD CONDUCT PERIODIC TESTS TO VERIFY THESE CURRENTS. WHENEVER AN EVENT SUCH AS SPILLAGE OF BLOOD OR SOLUTIONS OCCURS, RE-TEST BEFORE FURTHER USE.

GROUND WIRE LEAKAGE CURRENT MUST BE CHECKED WHENEVER INSTRUMENT CASE IS OPENED BY A QUALIFIED BIOMEDICAL ENGINEERING TECHNICIAN.

POWER SUPPLY IS INTERNALLY FUSED. REPLACE POWER SUPPLY ONLY WITH ASPECT MEDICAL SYSTEMS BIS VISTA POWER SUPPLY.

1.2 Cautions

Read this entire manual carefully before using the monitor in a clinical setting.

Do not autoclave the BISx or Monitor. Autoclaving will seriously damage both components.

Do not block ventilation inlet holes on the underside of monitor.

Do not open BISx for any reason. The seal to prevent liquids from entering the BISx may be damaged if opened. Service or repairs must be performed only by qualified biomedical technicians.

The BIS VISTA system has been designed to operate with a BIS sensor. The sensor is a silver/silver chloride electrode array that utilizes Aspect's patented Zipprep™ technology and uses a proprietary connector. Use of other electrodes is not recommended.

Continuous impedance checking may need to be disabled if the 1 nanoampere 128 Hz impedance check signal interferes with other equipment (e.g., evoked potential monitors).

Check the battery periodically by operating a BIS VISTA monitor that has been disconnected from the wall socket and that has been charged to full capacity (at least 6 hours of charge time). After long periods of storage (e.g., more than 1 month) it may be necessary to cycle (charge, then discharge) the battery a few times to get full charge capacity. If the BIS VISTA monitor fails to operate reliably from the battery for approximately 45 minutes, battery replacement is required.

The BIS VISTA monitor contains an internal Lithium ion battery. The battery must be removed by a qualified service technician and disposed of or recycled in accordance with the national laws of the country. Contact Aspect Medical Systems, Inc. or the local distributor for a replacement battery: Aspect part number 186-0208.

Avoid liquid ingress to the Patient Interface Cable. Contact of fluids with the PIC sensor connector can interfere with PIC performance.

The BIS VISTA system complies with the electromagnetic compatibility requirements of EN60601-1-2. Operation of this device may affect or be affected by other equipment in the vicinity due to electromagnetic interference (EMI). If this occurs:

- Increase separation between devices
- Re-orient device cabling
- Plug devices into separate outlet circuit branches

Refer to Section 9.2 “Electromagnetic Compatibility Specifications”.

Do not disconnect the BISx during the software upgrade.

When connecting or disconnecting BISx, take care not to touch the exposed contacts of either connector. Damage due to electrostatic discharge may result.

Using accessories other than those specified may result in increased electromagnetic emissions or decreased electromagnetic immunity of the BIS VISTA Monitoring System.

The BIS VISTA Monitor should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the BIS VISTA Monitor should be observed to verify normal operation in the configuration in which it will be used.

Important:

The BIS VISTA systems comply with the European Medical Device Directive (MDD) and applicable regulatory requirements of the country distributed to and carry the CE_{XXXX} Marking. Declarations of Conformity provided upon request where appropriate.

BIS VISTA, BISx and the BISx logo are trademarks of Aspect Medical Systems, Inc. Aspect, Bispectral Index, BIS, the BIS logo, and Zipprep are trademarks of Aspect Medical Systems, Inc. and are registered in the U.S.A., E.U. and other countries.

1.3 Key to Symbols












	Manufacturer
	Authorized Representative in the European Community
	Conformité Européenne (CE) Marking of Conformity to European Medical Device Directive. CE _{XXXX} represents the Notified Body number
	Classified by Underwriters Laboratories Inc.® with respect to electric shock, fire and mechanical hazards only, in accordance with UL 60601-1 and IEC60601-2-26
	Recognized under the Component Recognition Program of Underwriters Laboratories Inc.
	Latex-free product
	Type BF Equipment
	Type BF Equipment Defibrillator-proof
	Crossed out wheelie bin indicates separate treatment from general waste at end of life
	Attention, Consult Accompanying Documents
	Attention, Data I/O, RS-232 Serial Port, Consult Accompanying Documents

Figure 1 - Symbol Key (page 1 of 3)






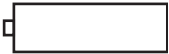

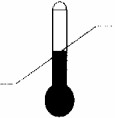


USB-A 	Attention, USB-A, Host. Consult Accompanying Documents
USB-B 	Attention, USB-B function. Consult Accompanying Documents
	Caution: Hot Surface
	Alternating Current
	D/C Current
	Battery Location
	Reset Button
	Storage Temperature Limits
	Monitor Power ON
	Monitor Power OFF or Standby Mode

Figure 1 - Symbol Key (page 2 of 3)









	Operating on Battery
	No Battery is Installed in Monitor
	Ringing Bell Icon - Alarm Sounding
	Green Bell Icon - Alarms Active
PAUSED 	Yellow Bell with Countdown Timer - Alarms Paused
SILENT 	Red Bell with 'X' - Alarms Silenced
	A green box denotes ON or active condition.
	A red box with an 'X' denotes OFF or cancel.

Figure 1 - Symbol Key (page 3 of 3)

SECTION 2

2 INSTALLATION AND PREPARATION FOR USE

INTRODUCTION

This section provides installation instructions for the Aspect BIS VISTA Monitor, BISx, and accessories. It includes:

- Installation checklist
- Proper environment
- Required equipment and supplies
- Cable connections
- Start and shutdown procedures
- Initial menu settings

2.1 BIS VISTA Monitor Installation and Checkout

1. Open packages and inspect for all components:
 - Monitor (P/N 185-0151)
 - Power cord
 - Pole clamp
 - BISx (P/N 185-0145-AMS)
 - PIC (Patient interface cable, connects BISx to patient)

Sensors are sold separately. For a list of available sensors please contact Aspect Medical Systems, Inc. or your local distributor.
2. Connect power cable to monitor, plug power plug into appropriate wall outlet.
 - Verify that light to right of ON/Standby button is yellow.
3. Start up monitor by pressing the ON/Standby button (lower right corner).
 - Verify beep tone as power switch is activated.
 - Verify that light to right of ON/Standby button is green.
 - Verify all self-tests complete successfully.
 - Verify next screen says “Connect BISx.”
4. Connect BISx to PIC and sensor.
 - Verify screen says, “BISx Initialization Complete.”
 - Verify SENSOR CHECK begins.
5. Disconnect power cord from rear of monitor.

- Verify ‘OPERATING ON BATTERY BACKUP’ is displayed.
 - Verify battery icon displays below BIS number.
6. Reconnect power cord.
 - Verify battery icon is not displayed below BIS banner.
 - Verify “OPERATING ON BATTERY BACKUP” is not displayed.
 7. End of install.

2.2 Environment

2.2.1 Shipping and Storage Environment

The monitor and its accessories can be stored or shipped within the following environmental limits. Note that these limits apply to non-operational storage and shipping situations.

Temperature	-10°C to +60°C
Humidity	15% to 95% (non-condensing)
Pressure	360 mmHg to 800 mmHg

Protect the monitor from sudden temperature changes that can lead to condensation within the instrument. To minimize condensation, avoid moving the system between heated buildings and outside storage. Once moved inside, allow the monitor to stabilize in the unopened shipping container at the inside ambient temperature before unpacking and placing into service. Before operation, wipe down all visible condensation and allow the system to reach equilibrium at room temperature.

2.2.2 Operating Environment

The BIS VISTA Monitoring System is not designed for use in areas containing flammable gases or vapors.

WARNING!

EXPLOSION HAZARD: DO NOT USE THE BIS VISTA SYSTEM IN A FLAMMABLE ATMOSPHERE OR WHERE CONCENTRATIONS OF FLAMMABLE ANESTHETICS MAY OCCUR.

MONITOR IS NOT DESIGNED FOR USE IN MRI ENVIRONMENT.

Temperature: The BIS VISTA monitor is designed to operate safely at a room temperature of 0°C to 40°C. Conditions that exceed these limits could affect reliability.

Humidity: The monitor is designed to operate within specifications at a relative non-condensing humidity of 15% to 95%.

Pressure: The monitor will operate satisfactorily at or above sea level, and is unaffected by extremes or changes in altitude within atmospheric pressures of 360 mmHg to 800 mmHg.

2.2.3 Power Requirements and System Grounding

The BIS VISTA Monitoring System requires a power source of 100-240 VAC, 50-60Hz. Current consumption is 0.7 ampere maximum.

To protect operating personnel and patients, the monitor must be properly grounded. Accordingly, the monitor is equipped with a hospital grade line cord. The power cord grounds the system to the power line ground when plugged into an appropriate three-wire receptacle.

WARNING!

FOR PROPER GROUNDING, THE POWER RECEPTACLE MUST BE A THREE-WIRE GROUNDED OUTLET. A HOSPITAL GRADE OUTLET IS REQUIRED. NEVER ADAPT THE THREE-PRONG PLUG FROM THE MONITOR TO FIT A TWO-SLOT OUTLET. IF THE OUTLET HAS ONLY TWO SLOTS, MAKE SURE THAT IT IS REPLACED WITH A THREE-SLOT GROUNDED OUTLET BEFORE ATTEMPTING TO OPERATE THE MONITOR.

IF THE INTEGRITY OF THE EXTERNAL PROTECTIVE EARTH GROUND IS IN DOUBT, THE BIS VISTA MONITOR SHALL BE OPERATED FROM ITS INTERNAL BATTERY POWER SOURCE ONLY.

FOR BIS VISTA SYSTEMS USED OUTSIDE OF NORTH AMERICA - A HARMONIZED LINE CORD WITH CONDUCTORS HAVING A CROSS SECTIONAL AREA GREATER THAN 0.75 mm² MUST BE USED.

2.2.4 Electromagnetic Compatibility Requirements

The BIS VISTA Monitoring System should be used only with the power cord and accessories recommended and supplied by Aspect Medical Systems, Inc. The system must be installed and put into use according to the specifications described in Section 9.2 “Electromagnetic Compatibility Specifications.”

Caution:

The BIS VISTA system complies with the electromagnetic compatibility requirements of EN60601-1-2. Operation of this device may affect or be affected by other equipment in the vicinity due to electromagnetic interference (EMI). If this occurs:

- Increase separation between devices
- Re-orient device cabling
- Plug devices into separate outlet circuit branches

Refer to Section 9.2 “Electromagnetic Compatibility Specifications”.

2.2.5 Site Preparation: Mounting the Monitor

Aspect Medical Systems, Inc. strongly recommends permanent mounting of the BIS VISTA monitor to the anesthesia machine to enhance safety and facilitate ease-of-use. Please contact your local representative or Aspect to discuss mounting options.

WARNING!

**BE SURE THE MONITOR IS MOUNTED SECURELY IN PLACE
TO AVOID PERSONAL OR PATIENT INJURY.**

2.2.5.1 Mounting the Monitor using the Pole Clamp

To mount the monitor to a secure vertical pole (1/2" - 1½" in diameter):

1. Place pole within clamp bracket and tighten screw using the black finger knob. Make sure that there is enough space above the clamp so that you have a few inches to slide the monitor in from above.
2. Line up the clamp shoe (on back of monitor) with the slot on pole clamp and slide monitor down to fit. The bottom of the clamp shoe should be seen well below the bottom of the pole clamp, and the monitor should snap securely into place.



Figure 2 - Pole Clamp

To remove the monitor, press tab on top of clamp shoe before sliding monitor up.

The pole clamp may be locked onto the monitor so that the two do not get separated. To do this:

1. Line up the clamp shoe (on back of monitor) with the slot on pole clamp and slide monitor down to fit. The bottom of the clamp shoe should be seen well below the bottom of the pole clamp and the monitor should snap securely into place.
2. Make sure that set screw hole on pole clamp aligns with corresponding hole on clamp shoe.
3. Remove black knob screw from pole clamp.
4. Using the Allen wrench supplied, secure pole clamp to monitor with the set screw provided.
5. Replace black knob screw.
6. To attach to pole, place pole within clamp bracket and tighten screw using the black finger knob.

2.2.5.2 Optional Mounting Accessories

For information on optional mounting accessories, request Aspect's "Monitor Mounting Solutions" booklet (part number 070-0031)

2.3 The BIS VISTA Monitoring System – Equipment and Supplies

The BIS VISTA Monitoring System consists of the following basic components:

- BIS VISTA Monitor (P/N 185-0151)
- BISx (P/N 185-0145-AMS)
- Patient Interface Cable (PIC)
- BIS Sensor
- Detachable Power Cord

Sensors are sold separately. For a list of available sensors please contact Aspect Medical Systems, Inc. or your local distributor.

A pole clamp is also included; however its use is optional. Contact Aspect or your local representative for information on additional equipment and accessories.



Figure 3 - The BIS VISTA Monitoring System

2.3.1 The BIS VISTA Monitor

2.3.1.1 Front Panel

The front panel of the BIS VISTA monitor contains the Touch Screen, BISx port and the ON/Standby button. See Figure 3.

2.3.1.2 Touch Screen

The BIS VISTA monitor is designed so that all controls (with the exception of the ON/Standby button) are accessible by touching a designated area on the monitor screen. This area is called a touch key. The touch keys are designed to function even when the user is wearing examination gloves.

2.3.1.3 ON/Standby button



The ON/Standby button is located in the lower right corner of the monitor and indicates whether the monitor is ON or in Standby mode. When the small LED light to the right of the ON/Standby button is green, the unit is running and providing power to the BISx. When it is yellow, the battery is charging and the system is in Standby mode. When it is not lit, no A/C power is available to the unit; pressing the ON/Standby button will start up the monitor using the battery.

2.3.1.4 Rear Panel

The rear panel components are pictured in Figure 4. They include: two USB ports (Type A and B), the clamp shoe, an RS-232 port, the Reset button, the Battery/Power Supply cover, and the power cord receptacle.

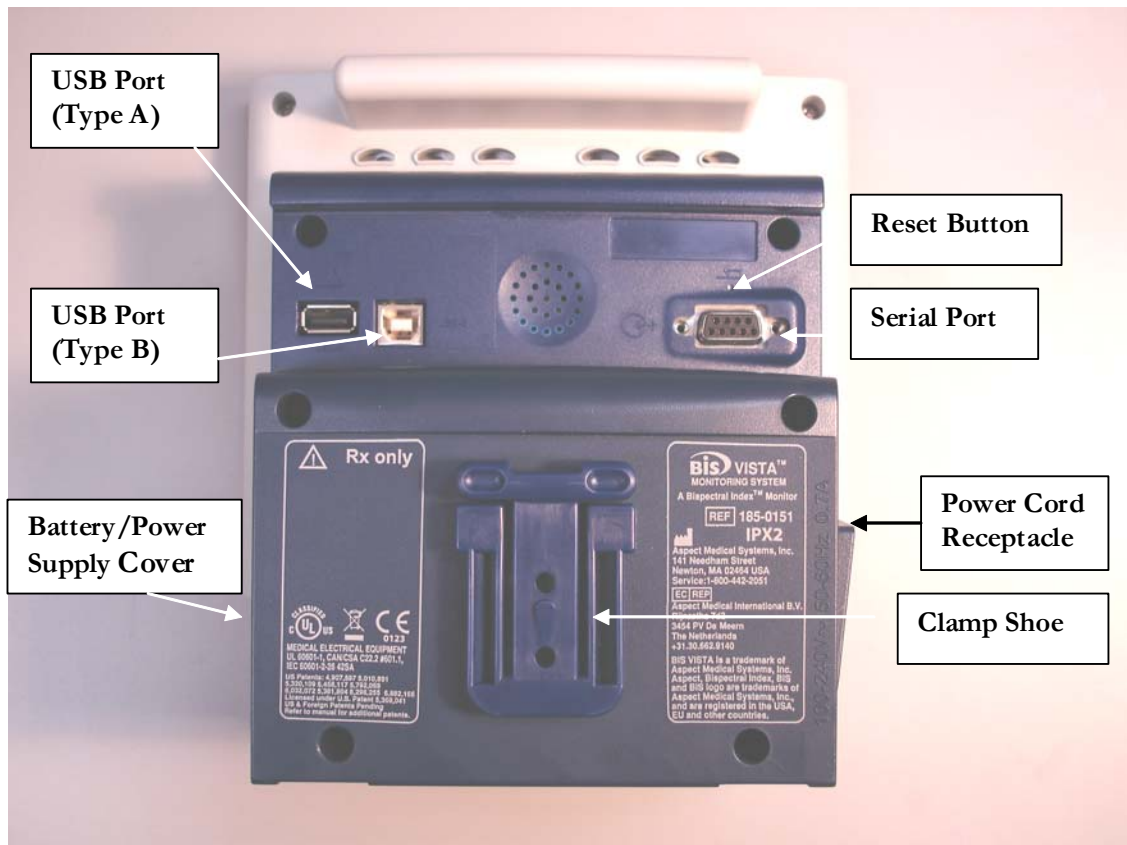


Figure 4 - Rear Panel

There are two **USB ports** on the rear of the monitor. The Type A port is used to export data to a removable drive. The Type B port is used to transfer data to a personal computer.

The **clamp shoe** allows the monitor to slide into the **pole clamp** so that it can be attached to a 1/2" – 1 1/2" diameter vertical pole.

The **RS-232 serial port** can be used to transfer data from the monitor.

WARNING!

WHEN CONNECTING EXTERNAL EQUIPMENT (e.g., DATA CAPTURE COMPUTER), THE SYSTEM LEAKAGE CURRENT MUST BE CHECKED AND MUST BE LESS THAN THE IEC 60601-1-1 LIMIT.

THE USE OF ACCESSORY EQUIPMENT NOT COMPLYING WITH THE EQUIVALENT SAFETY REQUIREMENTS OF THIS EQUIPMENT MAY LEAD TO A REDUCED LEVEL OF SAFETY OF THE RESULTING SYSTEM. CONSIDERATION RELATING TO THE CHOICE SHALL INCLUDE:

- **USE OF THE ACCESSORY IN THE PATIENT VICINITY**

- **EVIDENCE THAT THE SAFETY CERTIFICATION OF THE ACCESSORY HAS BEEN PERFORMED IN ACCORDANCE TO THE APPROPRIATE IEC 60601-1 AND/OR IEC 60601-1-1 HARMONIZED NATIONAL STANDARD.**

Under normal operation, power is cycled through the ON/Standby button. The **Reset** button can be used to reset the software functions of the BIS monitor (and the BISx if it is attached) in the unlikely case that it is required. See Section 7.4. “Using the Reset Button.”

The **Battery/Power Supply cover** contains the BIS VISTA monitor’s power supply and allows access to its battery.

The **power cord receptacle**, located on the side of the Battery/Power Supply cover, is used to plug in a three-prong hospital grade power cord to provide power to the monitor and to the BISx when attached.

Caution:

The BIS VISTA Monitoring System complies with the electromagnetic compatibility requirements of EN60601-1-2. Operation of this device may affect or be affected by other equipment in the vicinity due to electromagnetic interference (EMI). If this occurs:

- **Increase separation between devices**
- **Re-orient device cabling**
- **Plug devices into separate outlet circuit branches**

Refer to Section 9.2 “Electromagnetic Compatibility Specifications”.

2.3.1.5 Integral Battery

A rechargeable lithium ion battery inside the monitor provides approximately 45 minutes of back-up power when power cannot be supplied via the power cord. Recharge time is approximately 6 hours. The battery charges continually as long as the unit is plugged into A/C power.

When the system is running on battery, a battery icon displays indicating the battery status. A battery icon with four green bars indicates that the battery is fully charged. When the battery reaches a low power condition, the monitor beeps and the battery symbol displayed on the screen changes color. In addition, a “Battery Voltage Low” message blinks in the Message area of the screen.

Caution:

Check the battery periodically by operating a BIS VISTA monitor that has been disconnected from the wall socket and that has been charged to full capacity (at least 6 hours of charge time). After long periods of storage (e.g., more than 1 month) it may be necessary to cycle (charge, then discharge) the battery a few times to get full charge capacity. If the BIS VISTA monitor fails to operate reliably from the battery for approximately 45 minutes, battery replacement is required.

The BIS VISTA monitor contains an internal lithium ion battery. The battery must be removed by a qualified service technician and disposed of or recycled in accordance with the national laws of the country. Contact Aspect Medical Systems, Inc. or the local distributor for a replacement battery: Aspect part number 186-0208.

2.3.2 BISx



Figure 5 – The BISx

The BISx receives, filters, and processes patient EEG signals. It is located close to the patient's head where the EEG signal is less subject to interference from other medical equipment.

The BISx is shown in Figure 5. Its long flexible **Monitor Interface Cable** connects to the front of the monitor. The **Patient Interface Cable (PIC)** connects the BIS sensor to the BISx.

The attachment clip on the BISx is used to secure it in a convenient location near the patient's head.

WARNING:

ENSURE THAT THE BIS_x DOES NOT COME INTO PROLONGED CONTACT WITH PATIENT'S SKIN, AS IT MAY GENERATE HEAT AND CAUSE DISCOMFORT.

Caution:

Do not open BIS_x for any reason. The seal to prevent liquids from entering the BIS_x may be damaged if opened. Service or repairs must be performed only by qualified biomedical technicians.

2.3.3 Patient Interface Cable (PIC)

Aspect's BIS Sensor Patient Interface Cable (PIC) (see Figure 3) connects the BIS_x to the BIS sensor.

2.3.4 BIS Sensors

After the BIS sensor has been placed correctly on the patient's head, it is connected to the PIC.

2.4 Cable Connections

After you have familiarized yourself with the safety information in the introductory section of this manual and have prepared a suitable environment, follow these steps to prepare the BIS VISTA system for operation.

1. Connect the BIS_x to the monitor

Holding the cylindrical connector with the flat side up, plug the BIS_x Monitor Interface Cable into the BIS_x port on the front of the monitor.

Once connected, the BIS_x need not be disconnected again. However, if you wish to disconnect the BIS_x cable from the monitor, carefully grasp the connector and pull. **DO NOT** pull on the cable.

2. Connect the PIC to the BIS_x

Attach the gray connector of the Patient Interface Cable to the BIS_x.

Note:

Connect with the BIS logo facing up for proper pin alignment. To disconnect the PIC, grasp the connector housing and pull firmly. **DO NOT** pull apart by the cable wire.

2.5 Start Procedure

2.5.1 Starting the Monitor for the First Time

To start the instrument for the first time, after it has been reset with the RESET button, or after battery replacement:

1. Attach one end of the power cord to the receptacle on the left side of the monitor.
2. Plug the other end of the power cord into a properly grounded hospital-grade AC power outlet. A yellow light illuminates to the right of the ON/Standby button.
3. Press the ON/Standby button. The light changes to green and diagnostics tests run to verify that the system is operating properly. A beep indicates that the tests are complete. If there is a problem, the system halts and an error message appears. Error messages are explained in the Troubleshooting section of this manual.

When not in use, the monitor should be placed in Standby mode. To **put the system in Standby mode**, press and hold the ON/Standby button. The light will change from green to yellow. If the monitor is running on battery, the light will go off completely.

2.5.2 Starting the Monitor from Standby Mode

When the monitor is in Standby mode (yellow light, or no light if running on battery), you may start it by pressing the ON/Standby button. The light will change to green.

When not in use, the monitor should be placed in Standby mode. To **put the system in Standby mode**, press and hold the ON/Standby button. The light will change from green to yellow. If the monitor is not connected to A/C power, the light will go off completely.

2.6 Initial Menu Settings

Before using the BIS VISTA monitor for the first time, you may need to select the proper language and set the current date and time. Other setting options are discussed in detail in Section 3.

The BIS VISTA monitor utilizes a touch screen. To access the Menus, press the [MENU] icon on the left side of the screen. Press the [Next] or [Previous] touch keys to scroll through the menu options. At any time you may press the [HOME] touch key to return to the main display screen.

2.6.1 Language Selection

The BIS VISTA monitor is designed to support multiple languages. If the screen does not display the desired language, follow these steps:

To change the language:

1. Press **[Language]**. A list of languages appears on the screen.
2. Press the desired language. All screens will now display in the selected language.
3. Press **[HOME]** to return to the main screen.

2.6.2 Date and Time

To set the current date and time:

1. Press **[Date and Time]**. A new screen displays the current date and time. “Day” is displayed in blue letters.
2. Use the up and down arrows to set the day of the month.
3. Press **[Month]**. “Month” is displayed in blue letters.
4. Use the up and down arrows to set the month.
5. Repeat this process for the “Year,” “Hour,” “Minute” and “Second” displays.
6. When you have finished, you may press **[Return to Previous Menu]** or press **[HOME]** to return to the main screen.

Note:

The time/date is initially set for the Eastern Standard Time zone (USA). It will be necessary for you to change the time twice per year using the Time/Date feature if you are located in a time zone that alters its clocks at the beginning or end of Daylight Savings Time.

2.6.3 View/Save Settings

The BIS VISTA monitor will always start up configured to settings that have been saved in memory.

To save the current configuration settings,

1. Press **[View/Save Settings]**. The current settings display.
2. Press **[Save Settings]**. The message, “Settings Saved” appears. The settings displayed will be saved except as noted below.
3. Press **[Return to Previous Menu]** or **[HOME]** to exit.

Notes:

The “Save Settings” option is disabled when in Battery Backup-Low Power condition.

The following settings are not saved by the Save Settings option: Impedance Checking (always returns to ON), Filters (returns to ON), and Display Type (returns to BIS).

Settings are set and saved for the current Monitor Mode only. See 3.5.9 “Monitor Mode.”

To return all settings for the current Monitor Mode to the factory default values:

1. Press **[View/Save Settings]**. The current settings display.
2. Press **[Restore Factory Defaults]**.

SECTION 3

3 OPERATING THE BIS VISTA MONITORING SYSTEM

INTRODUCTION

This section covers:

- Preparing for operation
- The sensor check
- The monitor screen display
- Software menus and menu selections
- Reviewing stored data
- The EEG display
- Ending a case

Read this section before operating the monitor in a clinical setting.

3.1 Preparing for Operation

After you have familiarized yourself with the safety information in the introductory section of this manual, prepared a suitable environment, properly connected the BISx and PIC cables, and completed the initial settings described in Section 2, follow these steps to prepare the BIS VISTA Monitoring System for operation.

1. Startup and System Check

Press the ON/Standby button on the lower right corner of the monitor to start the monitor. The light changes from yellow to green, and the system initiates a self-test to make sure that all equipment is operating properly.

2. Attach BIS Sensor to Patient

Prepare sensor site and place the BIS sensor on the patient in accordance with the instructions included on the sensor packaging.

Caution:

The BIS VISTA Monitoring System has been designed to operate with a BIS sensor. The sensor is a silver/silver chloride electrode array that utilizes Aspect's patented Zipprep technology and uses a proprietary connector. Use of other electrodes is not recommended.

WARNINGS!

THE CONDUCTIVE PARTS OF ELECTRODES OR SENSOR AND CONNECTORS, INCLUDING THE NEUTRAL ELECTRODE, SHOULD NOT CONTACT OTHER CONDUCTIVE PARTS, INCLUDING EARTH.

TO REDUCE THE HAZARD OF BURNS IN THE HIGH-FREQUENCY SURGICAL NEUTRAL ELECTRODE CONNECTION, THE SENSOR OR ELECTRODES SHOULD NOT BE LOCATED BETWEEN THE SURGICAL SITE AND THE ELECTRO-SURGICAL UNIT RETURN ELECTRODE.

THE SENSOR MUST NOT BE LOCATED BETWEEN DEFIBRILLATOR PADS WHEN A DEFIBRILLATOR IS USED ON A PATIENT CONNECTED TO THE BIS VISTA SYSTEM.

TO MINIMIZE THE RISK OF PATIENT STRANGULATION, THE PATIENT INTERFACE CABLE (PIC) MUST BE CAREFULLY PLACED AND SECURED.

3. Secure the BISx

Using the attachment clip, secure the BISx to a convenient location near the patient's head.

4. Attach the BIS Sensor to the PIC

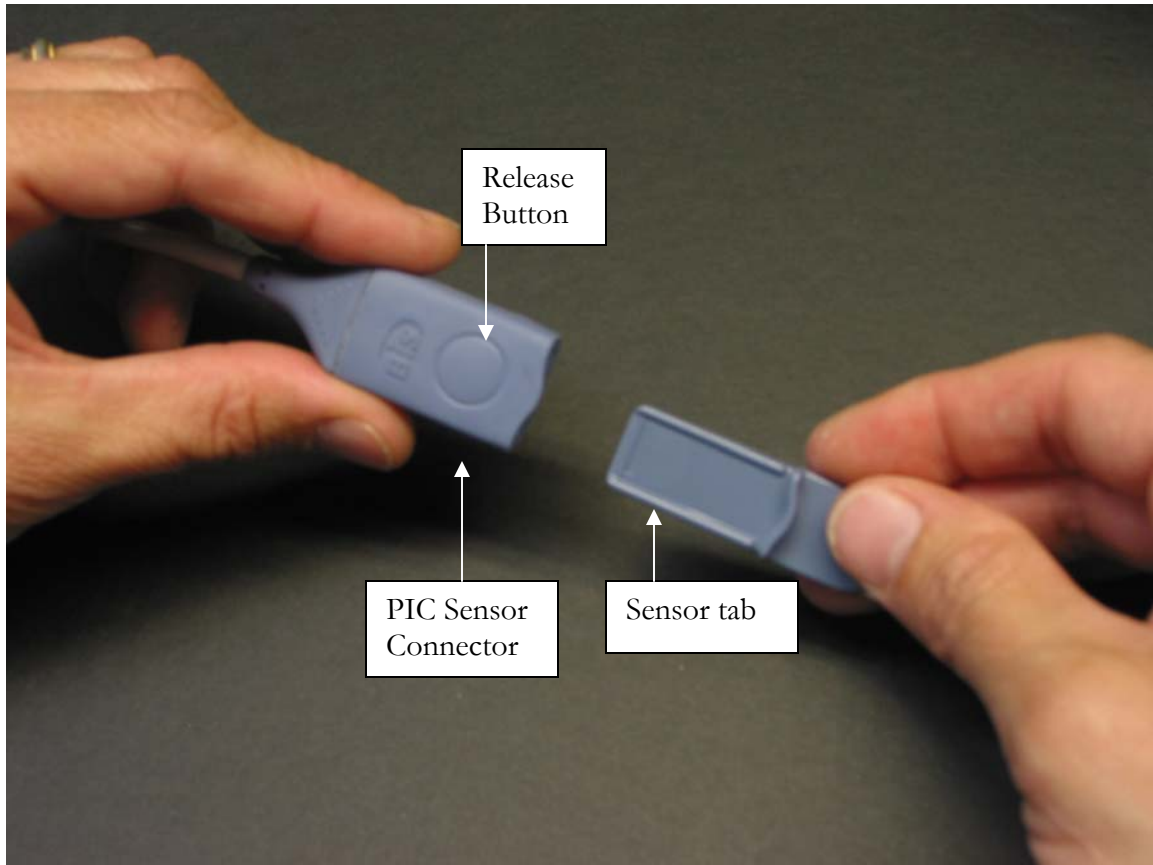


Figure 6 - Connecting the PIC

To insert the sensor into the PIC, line up as shown and insert the sensor tab into the PIC sensor connector until an audible “click” is heard. The blank side of the sensor tab (i.e. the side without the computer chip) should be facing up.

The Sensor Integrity Check is initiated each time that a sensor is connected to the PIC. It checks to make certain that a valid, unexpired sensor is in use.

3.2 The Sensor Check

The Sensor Check tests the impedance of each electrode on the BIS sensor to verify that it is within an acceptable range for monitoring. A Sensor Check is initiated automatically when the sensor and PIC are connected to the BISx. It may also be initiated by the user by pressing the **[Sensor Check]** touch key.

The message, “Sensor Check in Progress” appears. When the sensor successfully passes the test, the Main Screen displays and monitoring begins.

If the sensor does not immediately pass the test, or if the user has manually initiated the test, the Sensor Check Graphic Screen displays. This screen shows a sensor with each electrode numbered. Colors indicate the status of each electrode:

- White hollow circle – No status is available (Lead is off).
- Green circle – The electrode impedance is within the acceptable range. Monitoring can begin.
- Red blinking circle – The electrode impedance is not within the acceptable range.

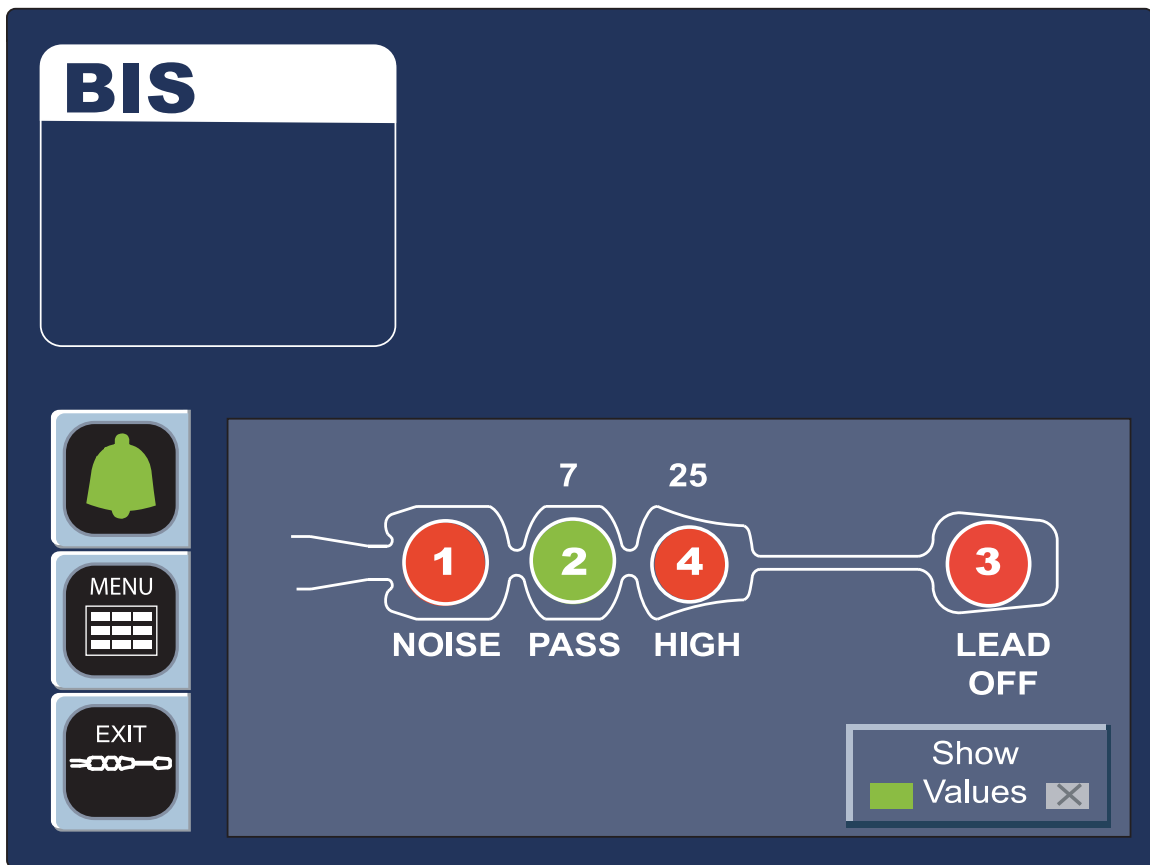


Figure 7 - The Sensor Check Graphic Screen with Impedance Values and Results

In this display, the impedance value for each electrode, in kilo ohms, appears on the screen along with its status:

PASS - An electrode passes if the impedance for that electrode is less than 7.5 kilo ohms. The ground electrode (element #2) must be less than 30 kilo ohms to pass.

HIGH - An electrode is labeled “HIGH” if its impedance value is above 7.5 kilo ohms. As long as the combined impedance of electrodes #1 and #3 and the combined impedance of

electrodes #1 and #4 are less than 15 kilo ohms, the sensor check will be considered successful. If the combined impedance is over the 15 kilo ohms limit, you will need to re-prepare the electrodes and check all connections. The monitor will continue to check impedance until it is acceptable.

NOISE - If the signal from the electrode goes beyond the measurable range, the label “NOISE” displays. Re-prepare the electrodes and check all connections.

LEAD OFF - If the impedance check indicates that the electrode is not in contact with the patient, the label “LEAD OFF” displays. Re-prepare the electrodes and check all connections.

The monitor continues updating the values until all impedance values are acceptable. To end the impedance test, press **[EXIT]**. The Sensor Check impedance test must be successfully completed before normal processing resumes.

3.3 The BIS Trend Data Screen

Once the sensor check has successfully completed, monitoring begins and the corresponding information appears on the screen.

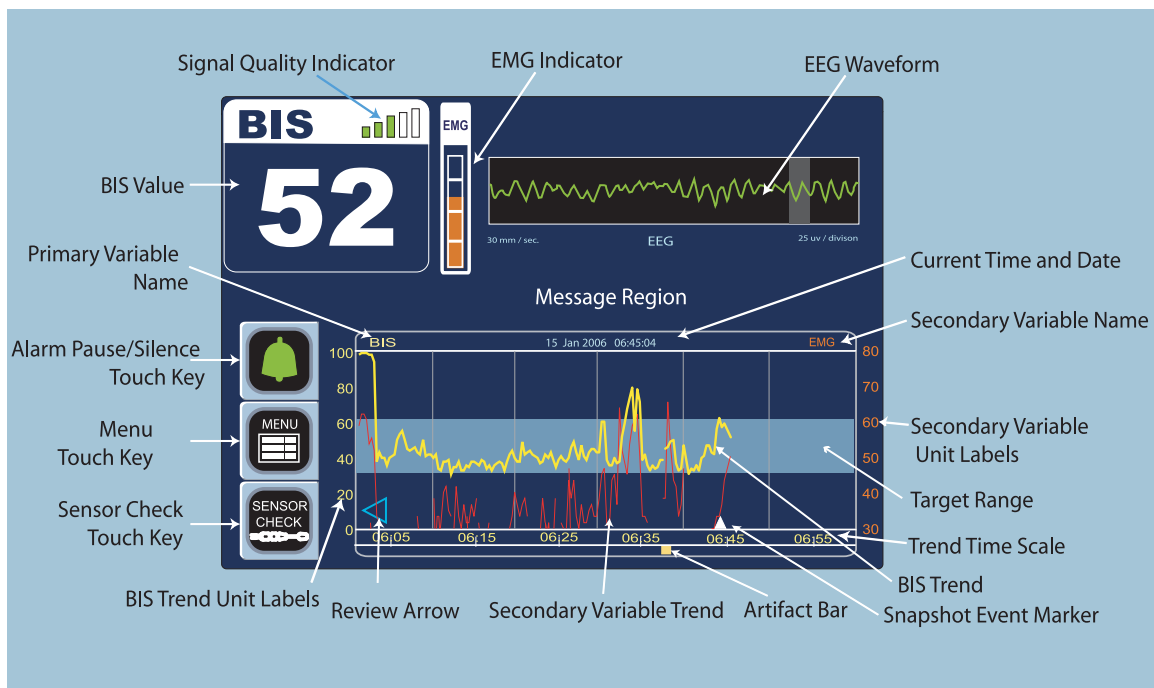


Figure 8 - Screen Features – The BIS Trend Data Screen

3.3.1 The BIS (Bispectral Index) Value

The current numeric value of the BIS is displayed in the upper left corner of the screen. The BIS number is displayed and continuously updated during all display modes as long as signal quality is sufficient.

3.3.2 Signal Quality Indicator

The Signal Quality Indicator (SQI) bar graph is displayed in the upper left corner of the screen, to the right of the “BIS” label. SQI is an indication of the quality of the EEG signal that is received and processed into screen data. Signal quality is optimal when all five bars are green.

3.3.3 The Electromyograph (EMG) Indicator

The EMG bar graph displays the power (in decibels) in the frequency range 70 - 110 Hz. This frequency range contains power from muscle activity (i.e., electromyography or “EMG”) as well as power from other high-frequency artifacts. When the indicator is low, it indicates that EMG activity is low.

3.3.4 The EEG Waveform Display

Filtered electroencephalogram (EEG) waveforms are displayed with a sweep rate of 30 millimeters per second and a scale of 25 microvolts per division. One or two channels of EEG may be displayed. EEG filters can be turned off, if desired.

3.3.5 The Message Region

The Message Region is a space reserved for status and error messages. The importance of a message is indicated by its background color; a message issued in orange is considered high priority; yellow indicates medium priority, light blue indicates low priority and dark blue indicates that the message is for information only. Diagnostic codes may be displayed above the messages by activating them in the Diagnostic Menu. Specific error messages are explained in the Troubleshooting section of this manual (Section 7).

3.3.6 The BIS Trend Graph

The BIS Trend Graph plots the values of the Bispectral Index over a 1 hour time period. The **BIS trend** is indicated with a thick line and its unit labels appear on the left axis. The name BIS is displayed above the left corner of the graph and the current date and time display in the center (See Figure 8 and Figure 9).

If a **target range** for BIS has been set, the target area displays as either a colored bar or two horizontal lines showing the upper and lower target ranges (depending on the user setting). If the BIS value falls outside of the target range, a message displays in the Message Region of the screen, and if an audible alarm was requested in the target range setup screen, the alarm sounds (unless alarms have been silenced). The alarm continues to sound until the BIS value returns to the target range or the alarm is silenced by pressing the alarm touch key. See Section 3.5.1 for more information.

A **secondary variable** may be added to the display by selecting “Suppression Ratio,” “EMG,” “Signal Quality,” or “Bursts/Minute” as a secondary variable in the menu system (See Section 3.5.2 “Secondary Variable” for instructions.) The secondary trend is shown with a thin line and its unit labels appear on the right axis. The secondary trend name is displayed above the right corner of the graph. Note that Burst Count is only available as a secondary variable when a BIS Extend Sensor is in use.

During periods of poor signal quality, a yellow **artifact bar** appears along the horizontal axis at the bottom of the graph. When signal quality is considered too low to calculate a BIS value, the bar becomes a darker yellow and any trend variables that are adversely affected by artifact will not be displayed.

A **Data Snapshot** may be taken to save up to 10 minutes of data leading up to a significant event. A Data Snapshot marker displays at the bottom of the BIS Trend Graph. Only one set of data is saved in memory at a time, although the marker continues to display on the trend graph even if its data has been overwritten. Snapshot data may be saved to a removable drive using the Export Data function in the menu system. See 3.5.10 “Export Data.”

If desired, EEG may be displayed in place of the BIS Trend Graph by selecting the EEG display mode in the menu system. See section 3.5.5 “BIS/EEG Display Modes” for details. During the sensor check procedure, this area of the screen is used to issue instructions and report current status.


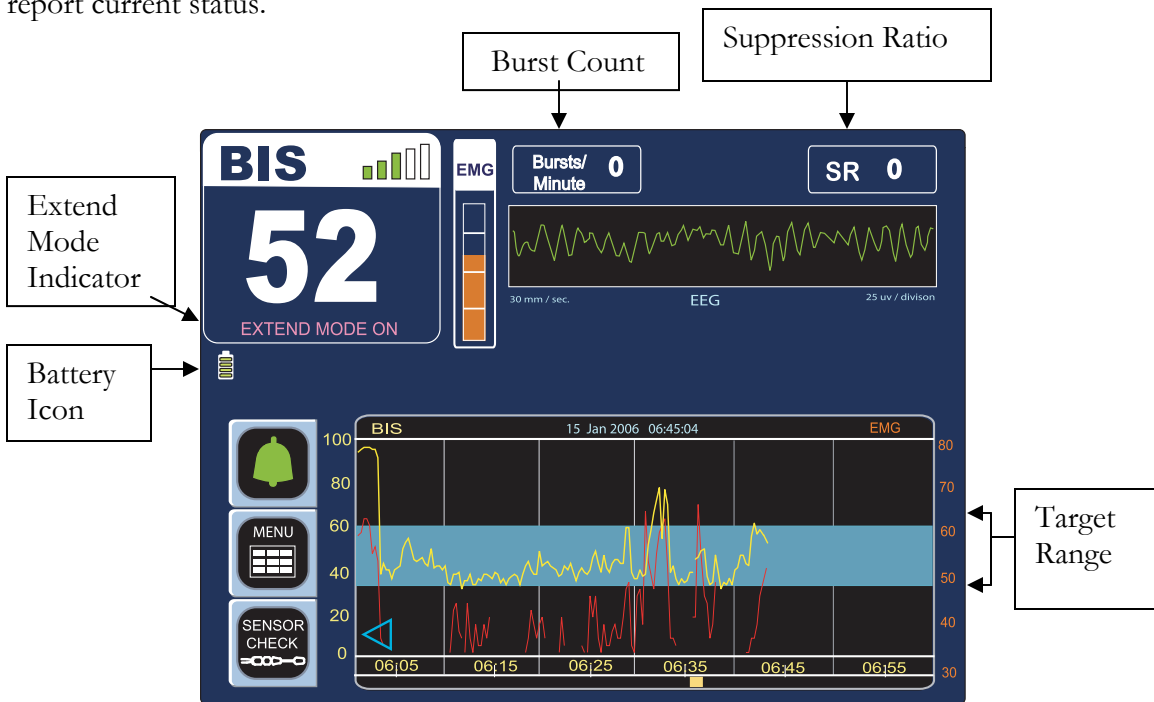


Figure 9 - BIS Trend Data Screen with Battery Icon, Target Range, SR, and Burst Count

3.3.7 Additional Screen Information

3.3.7.1 The Battery Icon

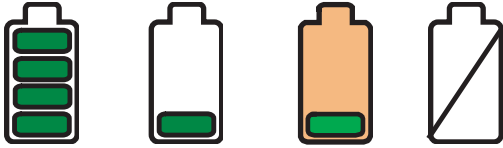

The battery icon is displayed when the monitor and BISx are running on battery power. When the battery icon contains four green bars, the battery is fully charged. When the icon turns orange, the battery is nearly depleted.

If an empty battery icon displays on the screen with a slash across it, there is no battery in the monitor.

3.3.7.2 Extend Mode

The message, “EXTEND MODE ON,” displays below the BIS number when a BIS Extend Sensor is in use.

3.3.7.3 The Suppression Ratio (SR) Number

The Suppression Ratio (SR) is displayed in the upper right corner of the screen only when it has been requested by the user. Suppression ratio is a calculated parameter designed to indicate when an isoelectric (flatline) condition may exist. Suppression ratio is the percentage of time over the last 63-second period that the signal is considered to be in the suppressed state. For example: SR=11 (isoelectric over 11% of the last 63 second review).

3.3.7.4 The Burst Count (Bursts/Minute) – Extend Mode Only

When a BIS Extend Sensor is in use, the Burst Count is displayed above the EEG waveform display. Burst Count is an alternative method of quantifying suppression, reported as the number of EEG bursts per minute. The Burst Count displays only when Signal Quality is adequate and the Suppression Ratio is greater than 5.

3.4 BIS Trend Data Screen Touch Keys

The Main Screen Touch Keys:





 <p>Alarm Sounding</p>	<p>When an alarm is sounding, the ringing bell displays. Pressing this icon silences the current alarm and returns the display to the green bell icon.</p>
 <p>Alarms Active</p>	<p>A green bell icon indicates that the alarms are active and will sound if activated. Pressing this icon changes the alarm status to “Alarms Paused” and the yellow bell icon displays.</p>
<p>PAUSED</p>  <p>Alarms Paused</p>	<p>A yellow bell indicates that all alarms have been silenced for two minutes. A countdown timer counts down the seconds until the alarm sounds again. Pressing this icon changes the alarm status to “Alarms Silenced” and the red bell icon displays.</p>
<p>SILENT</p>  <p>Alarms Silenced</p>	<p>The red bell with a solid “X” over it indicates that all alarms have been silenced indefinitely. Pressing this icon restores the active alarms and the green bell icon displays.</p>

Figure 10 - The Alarm Touch Keys

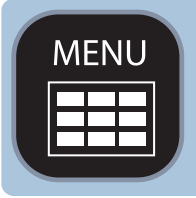

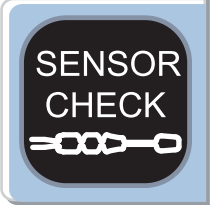

	<p>The MENU/HOME touch key:</p> <p>The [MENU] touch key is used to enter the Menu system.</p>
	<p>When a menu displays, the [MENU] touch key becomes the [HOME] touch key.</p> <p>The [HOME] touch key is used to return to the main display screen.</p>
	<p>The SENSOR CHECK touch key:</p> <p>This touch key is used to begin a sensor impedance check. Sensor Check is initiated automatically when the PIC and sensor are attached to the BISx. You may initiate another check at any time by selecting this option.</p> <p>When an automatic check has been completed successfully, the screen will exit automatically. Otherwise, the user may press the [EXIT] key at any time to exit. For details on the sensor check procedure, refer to Section 3.2 “The Sensor Check.”</p>
	<p>The Review Mode Arrow</p> <p>This touch key is used to enter Review Mode</p>

Figure 11 – The Menu, Home, Sensor Check and Review Mode Touch Keys

3.5 Menu Selections

Before using the BIS VISTA monitor for the first time, you may want to update the monitor with your desired screen settings and the current date and time. You should also familiarize yourself with the various menu options available. This section describes the menu options available and how they work. These menu options are discussed below. For more detail on what the settings mean, refer to “The BIS Trend Data Screen” in Section 3.3 and “Features and Capabilities” in Section 5.

3.5.1 Target Range

To access the Target Range, press [MENU].

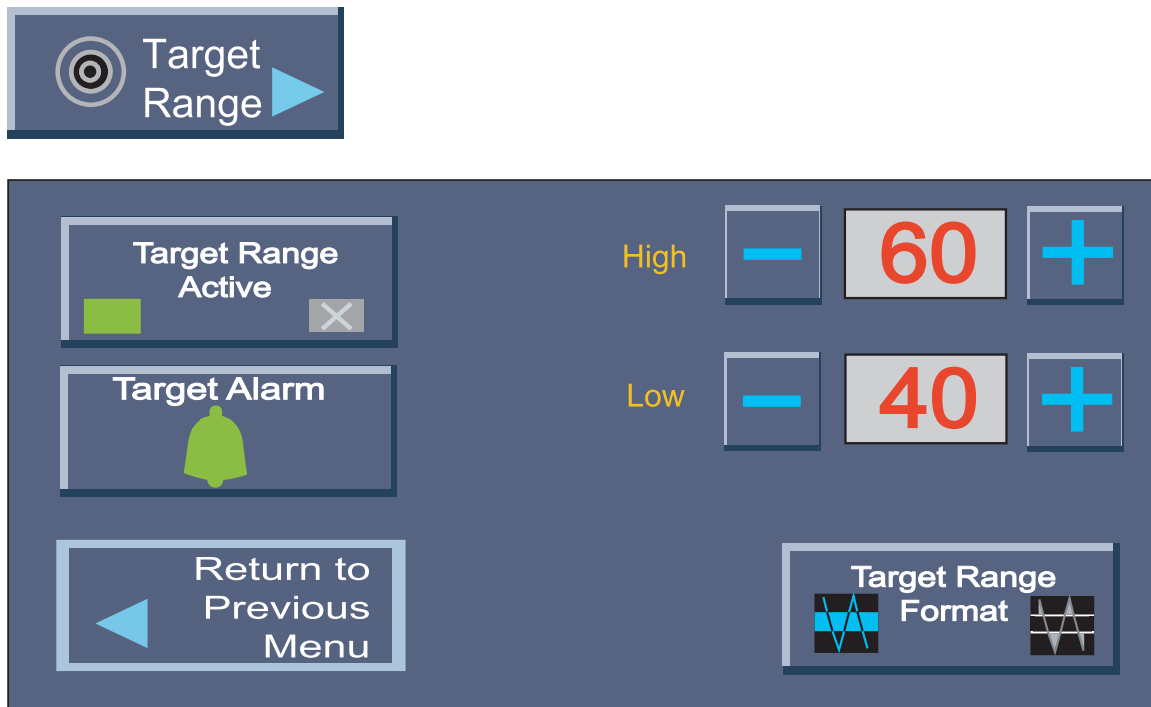


Figure 12 - Target Range

To aid in patient management, a target range of desired BIS values may be set. When the Target Range is activated, the selected range displays on the BIS Trend Graph. The BIS VISTA monitor will notify the user when the patient’s BIS value is outside of the intended range. The Target Range menu has four components:

1. Activating the Target Range feature so that the range displays on the BIS Trend Graph.
2. Setting the Target Range display format (colored band or two horizontal lines).
3. Setting the audible alarm to sound when a BIS value falls outside of the range.
4. Setting a Target Range of desired BIS values.

To set the Target Range options, press [**Target Range**]. The Target Range Screen displays.

1. To activate the Target Range so that it displays on the BIS Trend Graph, or deactivate it so that it does not, press [**Target Range Active**].

- When the Target Range is active, a green box displays.
 - When the Target Range is inactive, a red box with an 'X' displays.
2. To change the Target Range display format, press the **[Target Range Format]** touch key. When the left side of the **[Target Range Format]** key is illuminated, the Target Range will display as a colored band. When the right side of the **[Target Range Format]** touch key is illuminated, the Target Range displays as a pair of horizontal lines denoting the upper and lower limits.
 3. To activate or deactivate the target alarm, press **[Target Alarm]**.
 - A green bell indicates that the Target Alarm is active. Alarms will sound when the BIS value falls outside of the Target Range, unless the alarms have been silenced on the main screen.
 - A red bell with an 'X' indicates that the Target Alarm is inactive. Audible Target Alarms will not sound.
 4. The Target Range upper (High) and lower (Low) limits are displayed between minus and plus signs. To change the Target Range, use the [+] and [-] touch keys to increase or decrease the Target Range limits. Each key press will change the limit by a factor of 5. The system will not allow the difference between the upper and lower limits to be less than 5. A high value of 100 = none, and a low of 0 = none.

To permanently save this change, press the **[View/Save Settings]** touch key in the menu system, then press **[Save Settings]**.

3.5.2 Secondary Variable

To access **Secondary Variable**, press **[MENU]**.

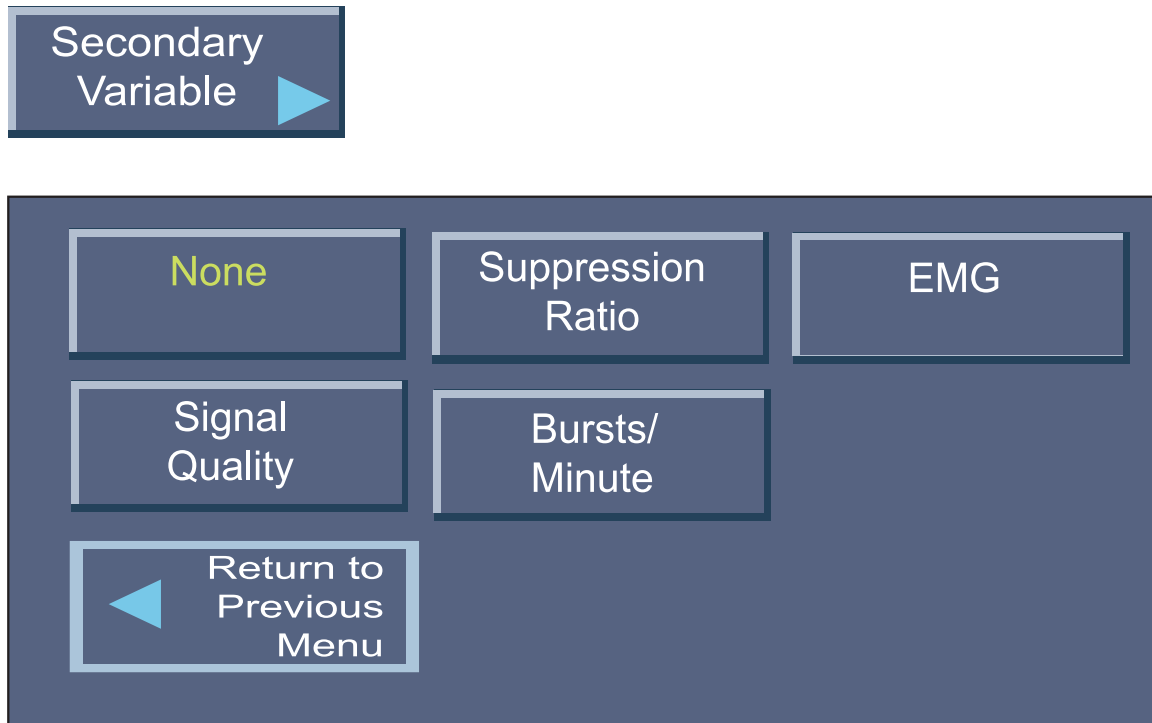


Figure 13 - Secondary Variable

This option allows the user to add a secondary trend variable to the Trend Graph:

- Selecting “**Suppression Ratio**” will plot the suppression ratio.
- Selecting “**EMG**” will plot electromyograph or high frequency signal detection.
- Selecting “**Signal Quality**” will plot a number (0 – 100) that indicates the quality of the EEG signal received and processed.
- Selecting “**Bursts/Minute**” will plot the burst count in number of bursts per minute. Note that this is available only when a BIS Extend Sensor is attached to the PIC. If a BIS Extend Sensor is not connected, this menu option does not appear.
- Selecting “**None**” removes the secondary variable from the graph.

To specify a secondary variable:

1. Press **[MENU]** to access menu options.
2. The **[Secondary Variable]** touch key displays the options available. The current setting displays in green.
3. Press the desired touch key (Suppression Ratio, EMG, Signal Quality, Bursts/Minute, or None).
4. When the desired setting is displayed in green letters, press **[Return to Previous Menu]** or **[HOME]** to exit.

To permanently save this change, press the **[View/Save Settings]** touch key in the menu system, then press **[Save Settings]**.

3.5.3 Chart Data

To access **Chart Data** press **[MENU]**.

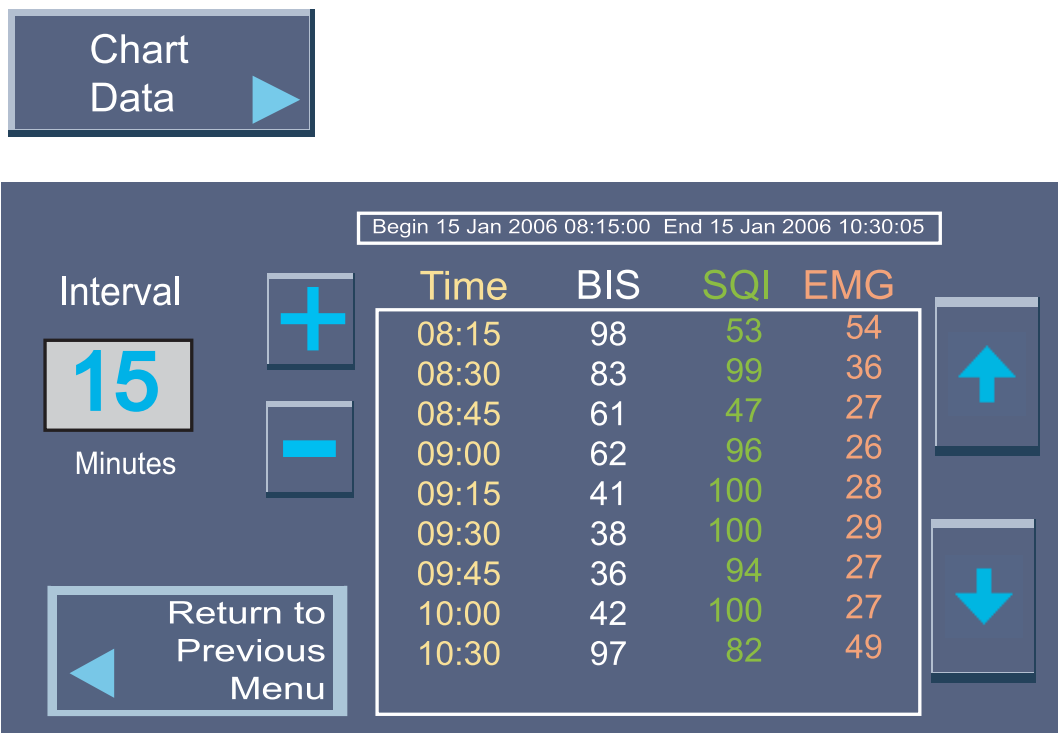


Figure 14 - Chart Data

When selected, this option provides a listing of BIS, SQI and EMG values at a selected interval, so that they can be recorded on the patient chart.

To chart data:

1. Press **[MENU]** to enter the menu system.
2. Press the **[Chart Data]** touch key. The Chart display appears.
3. To change the charting interval, use the **[+]** and **[-]** touch keys. Available intervals are 1, 5, 10, 15, 30 and 60 minutes.
4. Use the **[↑]** and **[↓]** arrows to scroll through the data.
5. Press **[Return to Previous Menu]** or **[HOME]** to exit.

3.5.4 Alarm Volume

To access **Alarm Volume**, press **[MENU]**.

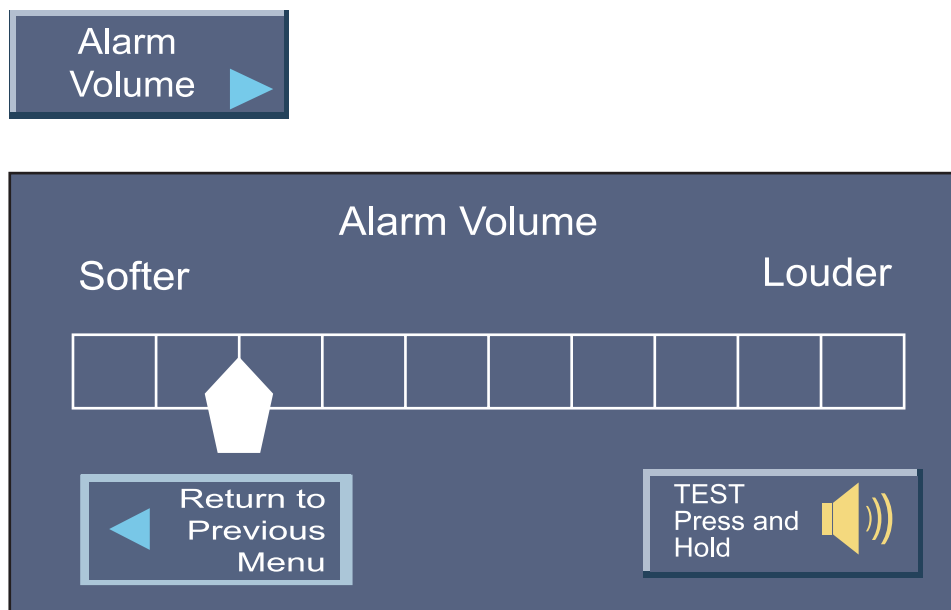


Figure 15 - Alarm Volume

The alarm volume can be set within a range, from low to high. The user may listen to the loudness of the current alarm by pressing the “Test” button.

To change the Alarm Volume:

1. Press **[Alarm Volume]**. The Alarm Volume screen appears.
2. Place your finger on the arrow and slide it right to increase the volume, or left to decrease the volume.
3. Press and hold the “Test” key to listen to the alarm volume you have set.
4. When the volume is set to the desired level, press **[Return to Previous Menu]** or press **[HOME]** to exit.

To permanently save this change, press the **[View/Save Settings]** touch key in the menu system, then press **[Save Settings]**.

3.5.5 BIS/EEG Display Modes

To access BIS/EEG Display Modes, press the [MENU].touch key.



Figure 16 - BIS/EEG Display Modes

The main display area of the BIS VISTA monitor can display either BIS Trend Graph or the EEG. The [BIS/EEG] touch key displays the current display mode (BIS or EEG) in green letters. To change the display, press the [BIS/EEG] key to toggle back and forth between the two display modes until the desired mode appears in green letters. Press [HOME] to exit.

The system defaults to the BIS Trend Data Screen display.

3.5.6 View/Save Settings

To access the View/Save Settings function, press [MENU].

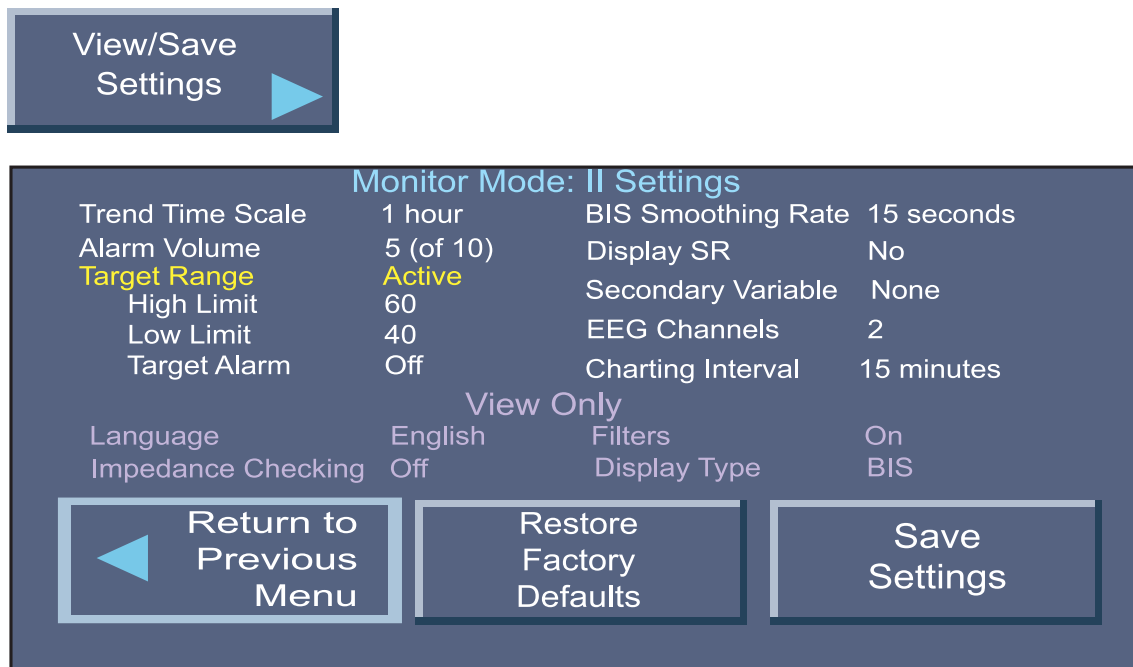


Figure 17 - View/Save Settings

The BIS VISTA monitor will always start up configured to settings that have been saved in memory.

To **view or save** the current configuration settings, press **[View/Save Settings]**. The current settings display. (To exit, press **[Return to Previous Menu]** or **[HOME]**).

To **save** the current configuration settings, press **[Save Settings]**. The message, “Settings Saved” appears. The settings displayed will be saved except as noted below:

Notes:

The “Save Settings” option is disabled when in Battery Backup-Low Power condition.

The following settings are not saved by the Save Settings option: Impedance Checking (always returns to ON), Filters (returns to ON), and Display Type (returns to BIS).

Settings are set and saved for the current Monitor Mode only. See 3.5.9 “Monitor Mode.”

Press **[Return to Previous Menu]** or **[HOME]** to exit.

To return all settings for the current Monitor Mode to the factory default values:

1. Press **[View/Save Settings]**. The current settings display.
2. Press **[Restore Factory Defaults]**.

3.5.7 Snapshot

To access the **Snapshot** function, press **[MENU]**.



Figure 18 - Snapshot

This option is used during operation to mark a significant event on the trend screen display and to save the previous 10 minutes of data leading up to the event. Snapshot data is saved in memory until another snapshot is taken.

To take a data **Snapshot**, press **[Snapshot]**. The event is immediately marked with an arrow on the time scale of the BIS Trend Graph.

Snapshot data may be exported to a removable drive.

3.5.8 Display Suppression Ratio (SR)

To access **Display SR**:

1. Press **[MENU]**.
2. Press **[Next]**.



Figure 19 – Display SR

The user may choose whether or not to display the Suppression Ratio (SR) on the main screen.

To change the setting, press **[Display SR]**.

- When the key shows a green box, the Suppression Ratio will display on the main screen.
- When the key shows a red box with an ‘X’, the Suppression Ratio will not be displayed.

To permanently save this change for the current Monitor Mode, press the **[View/Save Settings]** touch key in the menu system, then press **[Save Settings]**.

3.5.9 Monitor Mode

To access **Monitor Mode**:

1. Press **[MENU]**.
2. Press **[Next]**.

The BIS VISTA monitor has four preset configurations (I, II, III, and IV) for use in different types of cases. Each mode has its own settings, which are set up during installation. The settings for each mode are covered in detail in Section 5.2.20 “Monitor Mode.” Settings may be changed at any time. When settings are saved using the “View/Save Settings” function, they are saved for the current mode only.

To change the monitor mode:

1. Press **[MENU]** to access menu options.
2. The **[Monitor Mode]** touch key displays the available modes, with the current mode displayed in green letters.
3. Press the touch key until the desired mode is displayed in green.

To permanently keep the monitor in the new mode, press the **[View/Save Settings]** touch key in the menu system, then press **[Save Settings]**.

3.5.10 Export Data

To access the **Export Data** function:

1. Press **[MENU]**.
2. Press **[Next]**.

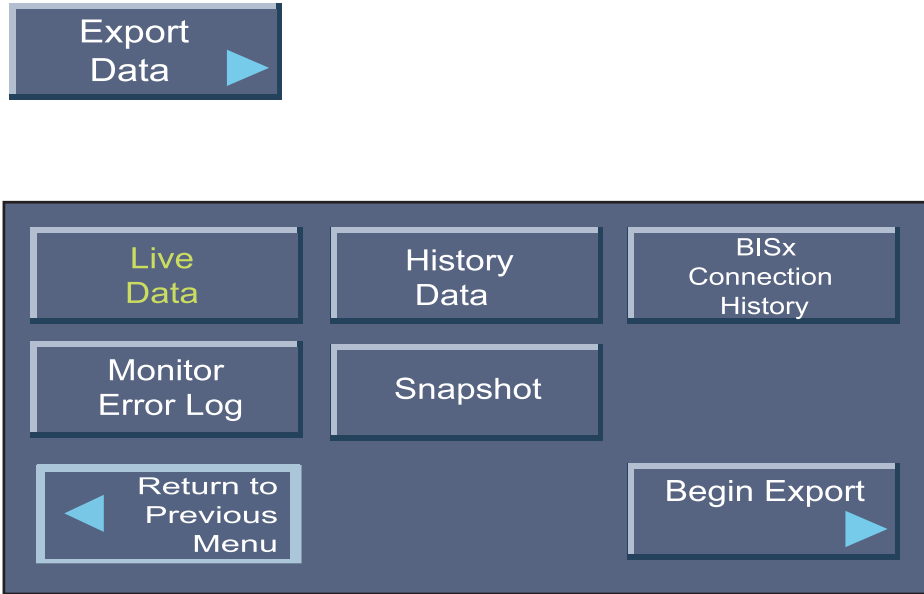


Figure 20 - Export Data

This selection allows the user to send data to a removable drive via the USB port (Type A) at the rear of the monitor, or to a device connected to the monitor's serial port. When a case is in process, the BIS number will continue to update and display during the export process.

To export data:

1. Press the **[Export Data]** touch key. The display shows the data types available for export.
2. Press the desired data type, then press **[Begin Export]**.
3. Export begins. If you press **[Return to Home Menu]** the export process will continue to run in the background. The status of the export can be viewed at any time by selecting **[Export]** from the Menu system.

3.5.11 BIS Smoothing Rate

To access the **BIS Smoothing Rate**:

1. Press **[MENU]**.
2. Press **[Next]**.



Figure 21 - Smoothing Rate

The BIS VISTA system offers three choices of smoothing rates over which the BIS value is averaged:

- 10 seconds: Provides increased responsiveness to state changes, such as induction or awakening. This is the default setting for Monitor Mode III.
- 15 seconds: This is the default setting for Monitor Modes I and IV.
- 30 seconds: Provides a smoother trend with decreased variability and sensitivity to artifact. This is the default setting for Monitor Mode II.

To change the Smoothing Rate, press the **[BIS Smoothing Rate]** touch key. The current Smoothing Rate displays in green letters. Press the key until the desired rate displays in green. Press **[HOME]** to exit.

To permanently save this change, press the **[View/Save Settings]** touch key in the menu system, then press **[Save Settings]**.

3.5.12 Configuration Information

To access **Configuration Information**:

1. Press **[MENU]**.
2. Press **[Next]**.

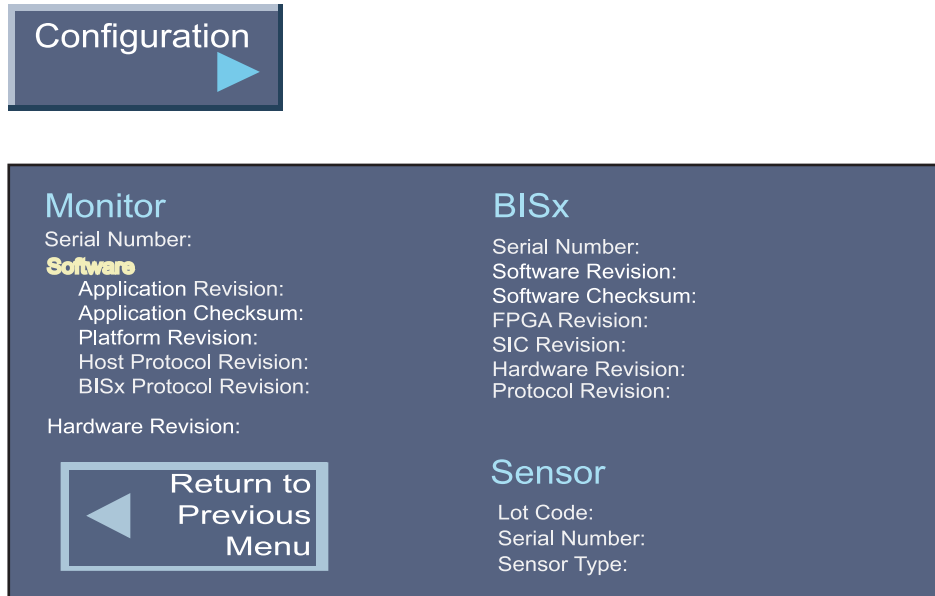


Figure 22 - Configuration Information

This option displays the current Monitor Mode and its settings, including:

- **Monitor:** Serial number, monitor software revision and operating system (OS) Software revision.
- **BISx:** Serial number, BISx software revision, FPGA Revision, and SIC Revision.
- **Sensor:** Lot code, serial number and sensor type.

3.5.13 EEG Channels

To access **EEG Channels**:

1. Press **[MENU]**.
2. Press **[Next]** to get to the next menu.
3. Press **[Next]** to get to the third menu.



Figure 23 - EEG Channels

The BIS VISTA monitor has the ability to display one or two channels of filtered EEG. To change the EEG display press the **[EEG]** touch key until the desired number of channels (1 or 2) is displayed in green. Press **[HOME]** to exit.

3.5.14 Date and Time

To access **Date and Time**:

1. Press **[MENU]**.
2. Press **[Next]** to get to the next menu.
3. Press **[Next]** to get to the third menu.

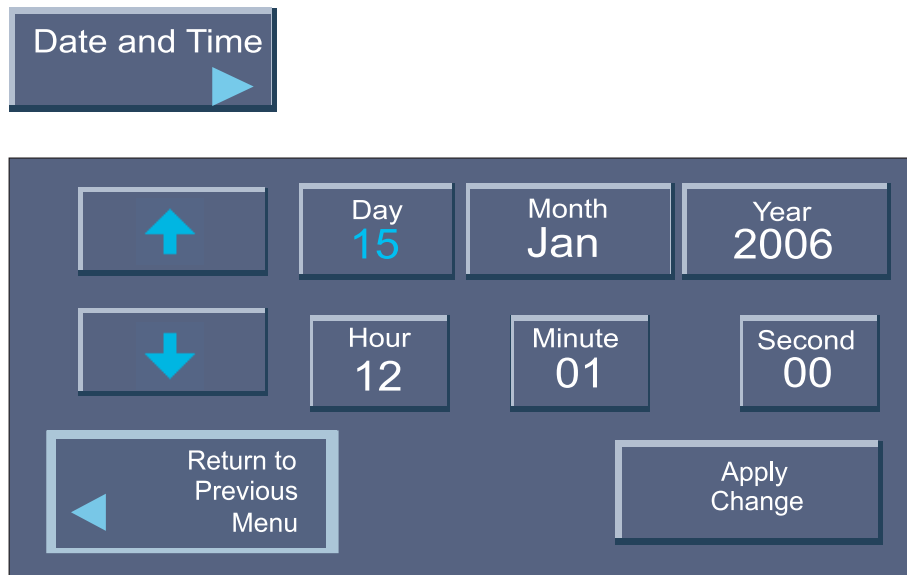


Figure 24 - Date and Time

To set the current date and time:

1. Press **[Date and Time]**. A new screen displays the current date and time. “Day” is displayed in blue letters.
2. Use the up and down arrows to set the day of the month.
3. Press **[Month]**. “Month” is displayed in blue letters.
4. Use the up and down arrows to set the month.
5. Repeat this process for the “Year,” “Hour,” “Minute” and “Second” displays.
6. Press **[Apply change]**.
7. When you have finished, you may press **[Return to Previous Menu]** or press **[HOME]** to return to the main screen.

Notes:

The time/date is initially set for the Eastern Standard Time zone (USA). It will be necessary for you to change the time twice per year using the Time/Date feature if you are located in a time zone that alters its clocks at the beginning or end of Daylight Savings Time.

When time is set to an earlier hour, the following message appears on the screen:

“Processing the requested change will result in loss of all data collected since [date and time.] Press "Return to Previous Menu" to return to Date and Time Menu with no changes. Press 'Apply change' to apply the requested change”.

Date and time cannot be changed while a case is in progress.

3.5.15 Language

To access **Language**:

1. Press **[MENU]**.
2. Press **[Next]** to get to the next menu.
3. Press **[Next]** to get to the third menu.



Figure 25 - Language Menu

The BIS VISTA monitor is designed to support multiple languages. If the screen does not display the desired language, follow these steps:

1. Press **[Language]**. A list of languages appears on the screen.
2. Press the desired language. All screens will now display in the selected language.
3. Press **[HOME]** to exit.

3.5.16 Filters

To access **Filters**:

1. Press **[MENU]**.
2. Press **[Next]** to get to the next menu.
3. Press **[Next]** to get to the third menu.



Figure 26 - Filters

The BIS VISTA system uses filters to screen out undesirable interference from the raw EEG signal display. If you prefer to observe the raw EEG without the filters, they may be turned off.

To turn the Filters off, press **[Filters]**.

- When the key shows a green box, the filters are ON.
- When the key shows a red box with an 'X', the filters are OFF.

This change is not saved with the Save Settings option. Filters will default to ON.

3.5.17 Impedance Checking

To access **Impedance Checking**:

1. Press **[MENU]**.
2. Press **[Next]** to get to the next menu.
3. Press **[Next]** to get to the third menu.



Figure 27 - Impedance Checking ON/OFF

The BIS VISTA system continually checks impedance levels during a procedure by generating a 128 Hz test signal. Occasionally this signal may interfere with other equipment. If this becomes a problem, you may turn off the continuous impedance checking. Impedance levels will still be tested at startup, but once they pass, they will not be tested again until a new case is begun.

To turn continuous impedance checking off, press **[Impedance Checking]**. The key display will change from a green box to a red box with an 'X'. Press **[HOME]** to return to

the main screen. The message, “Impedance Checking Off” will display on the screen during processing.

Note:

Turning off continuous impedance checking will not be saved by the “Save Settings” feature. The next time the monitor is started up, the monitor will re-enable continuous impedance checking.

3.5.18 Maintenance Menu

The Maintenance Menu includes maintenance functions to test, upgrade and restore settings to the monitor and BISx.

To display the Maintenance Menu:

1. Press **[MENU]** to access the menu options.
2. Press **[Next]** to proceed to the next menu.
3. Press **[Next]** again to proceed to the third menu.
4. Press **[Maintenance Menu]**. The Maintenance Menu appears.

Use of the Maintenance Menu is covered in Section 7, “Diagnostics and Troubleshooting.”

3.5.19 Demo Case

To access **Demo Case**:

1. Press **[MENU]**.
2. Press **[Next]** to go to the next menu.
3. Press **[Next]** to go to the third menu.

This option allows the user to run a demonstration case. Press the **[Demo Case]** touch key to initiate a Demo Case. The Main Screen appears, with the heading, “Demo Case.” To stop the demonstration, press the Menu touch key to access the Demo Case menu item, and press the touch key again to stop it.

Note: The Demo Case function uses pre-stored simulated case data. It should not be used for patient monitoring at any time.

3.5.20 Diagnostic Menu

To display the Diagnostic Menu:

1. Press **[MENU]** to access the menu options.
2. Press **[Next]** to proceed to the next menu.
3. Press **[Next]** again to proceed to the third menu.
4. Press **[Diagnostic Menu]**. The Diagnostic Menu appears.

Contact Aspect Medical Systems, Inc. for instructions on use of the Diagnostic Menu. See back cover for contact information.

3.6 Reviewing Stored Trend Data



Figure 28 - Review Mode

Up to 72 hours of trend information may be viewed in Review Mode. To review information, press the blue [◀] arrow key on the Main Screen display. The screen indicates that you are viewing Trend Review data.

Press the [REWIND] touch key to move the display backward in time. To move to the beginning of the current case, press [Case Start]. If the case start is already displayed, you may press [Previous Case Start] to view the previous case. If the earliest case in memory is displayed, the key notifies the user that it has reached the “Beginning of BIS Trend Memory.”

Press the [ADVANCE] touch key to move forward in time. To move to the beginning of the next case, press [Next Case]. If the last case in memory is displayed, the key notifies the user that it has reached the “End of BIS Trend Memory.”

The Review Mode screen displays a secondary trend plot if one has been selected in the menu system. To add a secondary trend, press the secondary variable touch key until the desired variable is displayed in green letters. Note that Burst/Minute will only display if a BIS Extend Sensor was used for the case.

The BIS numeric display for the current procedure will continue to be updated and parameter alarms will continue to be announced during Review Mode.

To return to the main display, press **[TREND REVIEW EXIT]**.

3.7 The EEG Display

This display is a larger version of the EEG waveform display, shown in place of the BIS Trend Graph. Filtered EEG waveforms are displayed with a sweep rate of 30 millimeters per second and a scale of 25 microvolts per division. EEG filters can be turned off in the menu system.

3.8 Ending a Case

When the case has finished:

- Disconnect the patient sensor from the PIC:
- Press the release button on the connector and pull the connectors apart. **DO NOT** pull apart by the cable wires.
- Remove BIS sensor from patient. Disposable sensors are single-use only.
- Be sure to leave the PIC with the monitor so that it is not inadvertently discarded.
- If this is the last procedure of the day, press and hold the ON/Standby button to put the BIS VISTA monitor in Standby mode (a yellow light displays)
- Clean the BIS VISTA system between uses. See Section 6.1.

WARNING!

SHOCK HAZARD: DO NOT ATTEMPT TO DISCONNECT THE POWER CORD WITH WET HANDS. MAKE CERTAIN THAT YOUR HANDS ARE CLEAN AND DRY BEFORE TOUCHING THE POWER CORD.

Note: The BIS VISTA can remain plugged in to A/C power at all times.

3.9 Data Transfer

BIS values and other EEG data may be acquired from the monitor using the USB port (Type B) on the rear of the monitor, or by using the monitor's serial port. Please contact Aspect Medical Systems, Inc. for instructions. (See back cover for contact information).

SECTION 4

4 QUICK REFERENCE GUIDE

This “Quick Reference Guide” is intended only as an operating checklist for users already familiar with the BIS VISTA monitor. Do not proceed unless you have read the “Important Safety Precautions” (Section 1 of this manual).

BASIC OPERATION

If the BIS VISTA system has already been installed, but has been put into Standby mode (after a previous surgery, for example), proceed as follows:

1. Verify that all power and other cables are connected properly.
 - The BISx’s long cable to the BISx port on the monitor.
 - The Patient Interface Cable to the BISx unit.
2. Press the button in the right corner of the monitor to turn the monitor and BISx on. The button light will turn from yellow to green. The system will initiate a self-test to ensure that all equipment is operating properly.
3. Prepare sensor site and place BIS sensor on the patient in accordance with manufacturer’s instructions.
4. Using the attachment clip, secure the BISx to a convenient location near the patient’s head.
5. Insert the BIS sensor tab into the PIC connector until fully engaged.

You are now ready to begin monitoring. A list of features and how to find them follows, for those familiar with operation. For detailed operating instructions and software configuration, read Sections 2 and 3. Current settings may be viewed at any time by viewing the appropriate menu. (See chart on next page.)

SECTION 5

5 FEATURES AND CAPABILITIES

INTRODUCTION

This section includes:

- How the BIS VISTA Monitoring System works
- System Features

5.1 How the BIS VISTA Monitoring System Works

A sensor placed on the patient's head transmits EEG signals to the BISx. The BISx filters the data, analyzes it for artifact and processes it using digital signal processing techniques, then sends the data to the monitor for display. The purpose of processing the EEG waveform data is to extract characteristic features from the complex signal in order to provide easier pattern recognition of changes over time during the recording.

A list of the processed variables and a description of each is provided in Appendix I. These data are displayed on the screen according to the preferences set by the user in the menu system.

BIS Range Guidelines

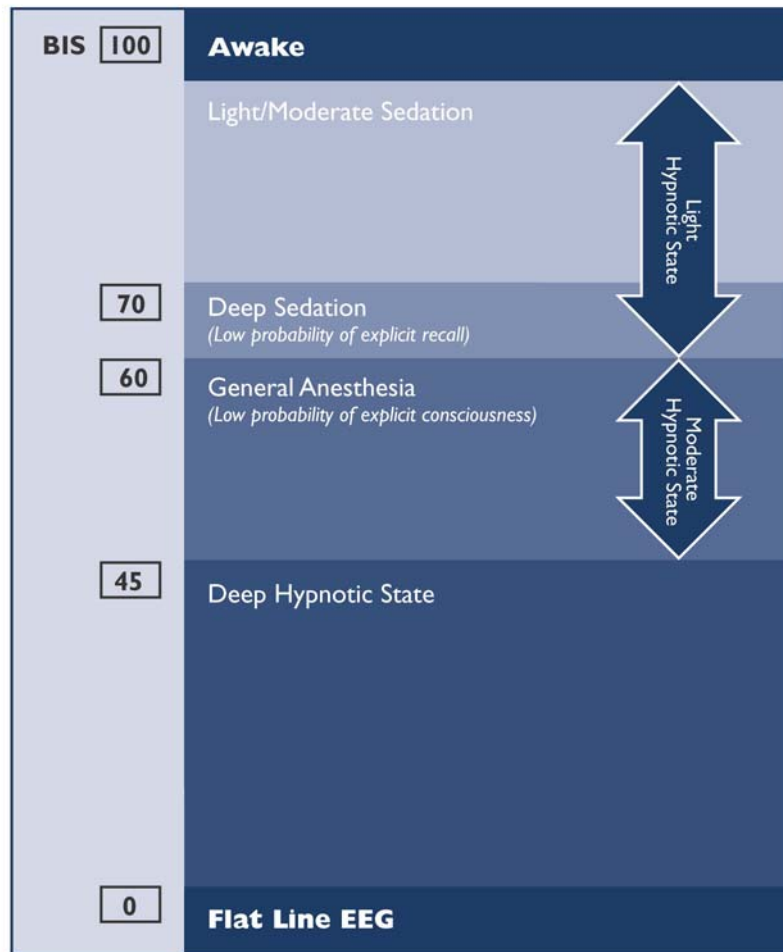


Figure 29 - BIS Range Guidelines

5.2 System Features

5.2.1 Bispectral Index (BIS)

Range = 0 – 100

The Bispectral Index is a continuous processed EEG parameter that correlates to the patient's level of hypnosis, where 100=awake and 0=flat line EEG. BIS was designed to correlate with "hypnotic" clinical endpoints (sedation, lack of awareness, and memory) and to track changes in the effects of anesthetics on the brain. BIS is displayed as a number in the upper left corner of the screen and is plotted over time on the BIS Trend Graph. When signal quality is too low to accurately calculate a BIS value, the BIS number is not displayed.

5.2.2 Signal Quality Indicator (SQI)

The SQI is a measure of the signal quality for the EEG channel source and is calculated based on impedance data, artifact, and other variables. It is displayed above the BIS Number. Signal quality is optimal when all five bars of the SQI icon are green. When signal quality is too low to accurately calculate a BIS value, the BIS value and other trend variables that are adversely affected by artifact will not be displayed on the screen.

5.2.3 Electromyograph (EMG) Indicator

EMG 70-110 Hz Bar Graph Display Range 30 – 55dB

The power (in decibels) in the frequency range 70-110 Hz is labeled “EMG.” This frequency range contains power from muscle activity (i.e., electromyography or “EMG”) as well as power from other high-frequency artifacts. The EMG bar graph displays this activity. **BIS monitoring conditions are optimal when the bar is empty.**

- 1 bar represents power in the 30-38 range
- 2 bars represent power in the 39-47 range
- 3 bars represent power in the 47-55 range
- 4 bars represent power greater than 55.

5.2.4 Suppression Ratio (SR)

Range = 0 – 100%

Suppression ratio is a calculated parameter to give the user an indication when an isoelectric (flatline) condition may exist. Suppression ratio is the percentage of time over the last 63-second period that the signal is considered to be in the suppressed state. For example: SR=11 (isoelectric over 11% of the last 63 second review). The SR is displayed in the upper right corner of the screen. When SR reaches 100%, the message “Isoelectric EEG Detected” will notify the user. Suppression ratio can be plotted over time as a secondary trend on the BIS Trend Graph.

5.2.5 Burst Count (Bursts/Minute)

Range = 0-20

Burst Count is an alternative method of quantifying suppression, available only when a BIS Extend Sensor is in use. The system defines a “burst” as a short period of EEG activity, preceded and followed by periods of inactivity. Computed from suppression data, it is reported as the number of EEG “bursts” per minute. The Burst Count is displayed at the top of the screen, and may also be graphed as a secondary variable on the BIS Trend Graph. When the signal quality is low or when the Suppression Ratio is less than 5, the Burst Count is not displayed.

5.2.6 BIS Trend and Secondary Trend Graph

The BIS Trend Graph plots BIS values over time. The user may set the trend time scale to 1 hour, 6, 12, or 24 hours. A secondary variable (Suppression Ratio, EMG, Signal Quality, or Bursts/Minute) may be added to the graph if desired. Note that Burst Count is only available as a secondary variable when a BIS Extend Sensor is in use.

5.2.7 Electroencephalogram (EEG) Waveform Display

Sweep speed – 30 mm/sec Amplitude – 25 μ V/ division

Filtered EEG waveforms are displayed with a sweep rate of 30 millimeters per second and a scale of 25 microvolts per division. Filters may be turned off in the menu system.

5.2.8 EEG Channels

The BIS VISTA monitor has the ability to display one or two channels of filtered EEG.

5.2.9 Filters

ON (2 – 70 Hz with notch) or OFF (.25 – 100 Hz)

The BIS VISTA system uses filters to screen out undesirable interference from the raw EEG signal display. If you prefer to observe the raw EEG without the filters, they may be turned off. The Notch filter includes filters for both 50 and 60 Hz. Filters ON or OFF does not affect processing of the Trend variables (i.e., BIS, EMG, and SR). Viewing the EEG signal without filters may aid in troubleshooting signal problems.

5.2.10 Artifact Detection

The BIS VISTA Monitoring System is designed to provide only highly reliable data. It is therefore programmed not to display data that has been corrupted by artifact. Artifact bars appear on the display whenever artifact is detected. In addition, a message appears whenever the signal cannot be processed due to excessive artifact.

5.2.11 Chart Data

When selected, this option provides a listing of BIS, SQI and EMG values at a selected interval, so that they can be recorded on the patient chart. The charting interval can be changed by the user. Available intervals are 1, 5, 10, 15, 30, and 60 minutes.

5.2.12 Target Range

This option allows the user to set a target range of optimal BIS values. When activated, this target range displays on the BIS Trend Graph. A message and an alarm notify the user if a BIS value falls outside of the range during monitoring.

The target range selection has four components:

1. Activating the target range so that it displays on the screen.
2. Setting the target range display format (colored band or two horizontal lines).
3. Setting the audible alarm to sound when a BIS value falls outside of the range.
4. Setting a target range of optimal BIS values.

5.2.13 BIS Trend Smoothing

The BIS VISTA monitor offers three choices of smoothing rates over which the BIS value is averaged:

- 10 seconds: Provides increased responsiveness to state changes, such as induction or awakening. This is the default setting for Monitor Mode III..
- 15 seconds: This is the default setting for Monitor Modes I and IV.
- 30 seconds: Provides a smoother trend with decreased variability and sensitivity to artifact. This is the default setting for Monitor Mode II.

5.2.14 Snapshot

When a significant event occurs, the user may take a Data Snapshot to save 10 minutes of data leading up to and including the event. When a Snapshot is taken, by pressing the **[Snapshot]** touch key, an arrow displays on the Trend graph time scale. Only one snapshot can be saved in memory at a time. Data can be exported to a removable drive using the Export Data function.

Ten minutes of data leading up to the most recent marked event (Data Snapshot) is saved and can be exported to a removable drive.

5.2.15 Demo Case

A demonstration case is available for use in familiarizing users with the BIS monitoring system. A sample case may be viewed on the monitor screen by selecting **[Demo Case]** from the menu system.

5.2.16 Languages

The BIS VISTA monitor is designed to display multiple languages, including English, French, German, Italian, Spanish, Portuguese, Chinese, Greek, Polish, Swedish and Dutch. When the language has been changed in the menu system, all screens display in the selected language.

5.2.17 Time/Date

The current time and date can be set in the menu system.

5.2.18 Review Mode

The BIS VISTA monitor stores up to 72 hours of trend information. This information may be viewed in the monitor's Review Mode. The Review Mode screen displays a secondary trend plot if one has been selected in the menu system.

The BIS numeric display for the current procedure will continue to be updated and parameter alarms will continue to be announced during Review Mode.

5.2.19 Standby Mode

The BIS VISTA monitor is in Standby Mode when the ON/Standby light is either yellow or completely off. When the ON/Standby button is yellow, A/C power charges the battery, but no power is supplied to the monitor screen or BISx. When the ON/Standby button is not lit, no A/C power is available to the unit. The unit may be started up using battery power by pressing the ON/Standby button. When the monitor is not in use, it should be switched into Standby Mode by pressing the ON/Standby button.

Note: To power down completely, disconnect power cord from A/C outlet.

5.2.20 Monitor Mode

The BIS VISTA monitor has four preset configurations (I, II, III, and IV) for use in different areas of the healthcare facility. Each mode has its own settings, which are set up during installation.

The default settings for each mode are shown in Figure 30 “Monitor Mode Settings.”

Variable	Default Value			
	I	II	III	IV
Smoothing Rate	15	30	10	15
Secondary Variable	None	None	None	None
Target Range	None	None	None	None
Target Alarms Audible	Yes	Yes	Yes	Yes
Target Range Display Format	Color Bar	Color Bar	Color Bar	Color Bar
Charting Interval	15 minutes	15 Minutes	15 Minutes	15 Minutes
Trend Scale (hours)	1	6	1	1
Alarm Volume	LOW	LOW	LOW	LOW
Display SR on Main Screen	No	Yes	No	No
Number of EEG Channels	1	1	1	1

Figure 30 - Monitor Mode Settings

Settings may be changed for the current mode. When the settings are saved using the “View/Save Settings” function, they are saved for the current mode only.

Factory settings for the current mode may be restored using the “View/Save Settings” function. To restore factory settings for all modes, use “Restore All Factory Defaults” in the Maintenance Menu.

5.2.21 Saved Settings

Whenever the monitor is started up from Standby mode, it reverts to user settings that have been set up and then saved using the **[Save Settings]** touch key. Settings are saved to the current Monitor Mode (I, II, III, or IV).

The “Save Settings” option is disabled when in Battery Backup-Low Power condition. The following settings are not saved by the Save Settings option: Impedance Checking (always returns to ON), Filters (returns to ON), and Display Type (returns to BIS).

To restore factory settings to the current Monitor Mode, use the **[View/Save Settings]** function. To restore the factory settings to all modes, press **[Restore All Factory Defaults]** in the Maintenance Menu.

5.2.22 System Alarms

Alarms sound to alert the user to possible problems with the patient or the equipment. Alarm conditions are prioritized so that high priority alarms take precedence over lower priority alarms. The user may silence the currently sounding alarm or silence all alarms, and may also set the alarm volume.

5.2.23 System Messages

The BIS VISTA monitor provides several types of messages to the user: Instructional, Informational, and Abnormal Condition. These messages are prioritized so that a high priority message displays before a lower priority message. The background color of the message indicates its priority:

Message Priority	Background Color
High	Orange
Medium	Yellow
Low	Light Blue
Information only	Dark Blue

5.2.24 System Self-Checks

The BIS VISTA monitor has several self-checking features to ensure that the system is operating properly. These include:

System Check

Initiated when the unit is started up, this test makes certain that system software and hardware components are functioning properly.

Equipment and Connection Checks

The system checks continuously to be sure that the BISx, the PIC, and patient sensors are operating properly and have not become disconnected.

DSC Self-Test

The DSC Self-Test tests the digital signal acquisition and conversion functions of the BISx. It is a thorough test of the entire signal processing chain. The DSC Self-Test may be initiated in the Diagnostics Menu (see Section 7).

Sensor Integrity Check

This test begins each time that a sensor is connected to the PIC. It checks to make certain that a valid, unexpired sensor is in use.

Impedance Check (Sensor Check)

Electrode impedance is tested when the BISx and PIC are connected and is monitored continuously unless the user has turned impedance checking off in the menu system.

Caution:

Continuous impedance checking may need to be disabled if the 1 nanoampere 128 Hz impedance check signal interferes with other equipment, e.g., evoked potential monitors.

Diagnostics

The BIS VISTA monitor provides diagnostic codes to assist the user in tracing the source of any problems that may occur. Codes are displayed in the Message Region only if the user has requested them in the Diagnostic Menu.

5.2.25 Data Memory

The monitor stores recorded trend data with time and date of acquisition. The duration of trend data stored is approximately 72 hours. Trend memory can be viewed on the screen using the Review arrow keys [←] [→] to scroll through memory.

Information on the current sensor can be viewed in the “Configuration Information” Screen.

When the memory is full, the oldest data are automatically erased as new data are stored. Memory will be retained even if the battery has been discharged and remains when the monitor is in the power off condition.

5.2.26 Battery Operation

In the event of a power failure or interruption of power during a procedure, the monitor automatically switches to back-up battery operation. A fully charged battery will provide approximately 45 minutes of operation. When the system is running on battery, a battery icon displays next to the BIS number, indicating the battery status. When the battery reaches a low power condition, the monitor beeps and the battery symbol displayed on the screen changes color from green to orange. In addition, a “Battery Voltage Low” message blinks continuously in the Message area of the screen.

The Save Settings feature is disabled when the battery power is low. Battery recharge time is approximately 6 hours. The battery charges continually as long as the unit is plugged into A/C power.

Note: To remove total power, disconnect power cord from A/C outlet. Battery can be removed to shut down unit completely.

5.2.27 Data Transfer

Three ports on the rear of the BIS VISTA monitor facilitate data transfer. The USB (Type A) port is used to export data to a removable drive. BIS values and other EEG data may be acquired from the monitor using the USB port (Type B) on the rear of the monitor. An RS-232 port is available to connect the monitor to a personal computer. Please contact Aspect Medical Systems, Inc. for instructions. (See back cover for contact information.)

WARNINGS!

THE USE OF ACCESSORY EQUIPMENT NOT COMPLYING WITH THE EQUIVALENT SAFETY REQUIREMENTS OF THIS EQUIPMENT MAY LEAD TO A REDUCED LEVEL OF SAFETY OF THE RESULTING SYSTEM. CONSIDERATION RELATING TO THE CHOICE SHALL INCLUDE:

- **USE OF THE ACCESSORY IN THE PATIENT VICINITY**
- **EVIDENCE THAT THE SAFETY CERTIFICATION OF THE ACCESSORY HAS BEEN PERFORMED IN ACCORDANCE TO THE APPROPRIATE IEC 60601-1 AND/OR IEC 60601-1-1 HARMONIZED NATIONAL STANDARD.**

WHEN CONNECTING EXTERNAL EQUIPMENT (e.g., DATA CAPTURE COMPUTER), THE SYSTEM LEAKAGE CURRENT MUST BE CHECKED AND MUST BE LESS THAN THE IEC 60601-1-1 LIMIT.

5.2.28 Software Upgrades

Monitor and BISx software upgrades are initiated automatically when the appropriate USB drive is attached to the monitor. The progress of the update displays on the monitor screen. When the upgrade is complete, the user is asked to reset the system.

Note:

When software is upgraded, all monitor configuration settings will be lost. Additionally, previously recorded data may be lost. Therefore, configuration settings and previous data should be recorded before the software update is performed.

SECTION 6

6 PREVENTIVE MAINTENANCE, CARE AND CLEANING

INTRODUCTION

This section describes:

- Care and cleaning procedures
- Routine maintenance
- Technical documentation
- Instrument Identification.

6.1 Care and Cleaning

WARNING!

UNIVERSAL PRECAUTIONS SHALL BE OBSERVED TO PREVENT CONTACT WITH BLOOD OR OTHER POTENTIALLY INFECTIOUS MATERIALS. PLACE CONTAMINATED MATERIALS IN REGULATED WASTE CONTAINER.

Cleaning the Monitor and BISx

Clean any spillage of blood or solutions on either the monitor or BISx as soon as possible. Dried blood is very difficult to remove. Use lint-free absorbent towels for spill cleanups. Dampen the towel with detergent and lukewarm water to aid in cleaning. After cleaning, wipe the PIC connector ends with alcohol and allow to dry completely. Residual moisture inside the connector may affect BISx performance.

Disinfecting the Monitor and BISx

Use lint-free absorbent towels dampened with a 10% bleach solution, or a commercial disinfectant (e.g. Lysol® Professional Disinfectant Foam Cleaner Spray or PDI Germicidal Disposable Wipes).

After cleaning, dry all areas except the monitor display screen (see below) with a lint-free absorbent paper towel. Wipe the BISx and PIC connector ends with alcohol and allow to dry completely.

WARNING!

WHENEVER AN EVENT SUCH AS SPILLAGE OF BLOOD OR SOLUTIONS OCCURS, RE-TEST GROUND LEAKAGE CURRENT BEFORE FURTHER USE.

DO NOT MIX DISINFECTING SOLUTIONS (e.g., BLEACH AND AMMONIA) AS HAZARDOUS GASES MAY RESULT.

Caution:

Do not autoclave the BISx or Monitor. Autoclaving will seriously damage both components.

Avoid liquid ingress to the Patient Interface Cable. Contact of fluids with the PIC sensor connectors can interfere with PIC performance.

Cleaning the Monitor Display

Clean the monitor display screen with a mild solution of detergent and warm water or a commercial display screen cleaner, available through personal computer dealers. To avoid scratching the screen, never use abrasive cleaners.

6.2 Maintenance

The BIS VISTA monitor is designed so that no periodic adjustment or calibration is required. Suggested routine maintenance includes: periodic checking of cable integrity, system checkout, checking the battery, and checking leakage current. Instructions on replacing the battery and power supply are included in this section should replacement be necessary. In the event that the touch screen needs calibration, follow the instructions in Section 7.1.4.

Caution:

Service or repairs must be performed only by qualified biomedical technicians.

6.2.1 Checking Cable Integrity

The BIS VISTA System should be inspected periodically to ensure that all cables are in working order, with no cuts in electrical insulation. Cables can be flexed during the system checkout (See Section 6.4) to ensure there are no loose wires.

6.2.2 System Checkout

A system checkout should be done periodically to verify that all system components are in working order. Follow the instructions below for System Checkout.

1. Disconnect the BISx from the monitor.
2. Connect power cable to monitor, plug power plug into appropriate wall outlet.
 - Verify that the light to the right of the ON/Standby button is yellow.
3. Start up monitor by pressing the ON/Standby button (lower right corner).
 - Verify beep tone as power switch is activated.
 - Verify that the light to the right of the ON/Standby button is green.
 - Verify all self-tests complete successfully.
 - Verify next screen says "Connect BISx."
4. Connect BISx to PIC and sensor.

- Verify screen says, “BISx Initialization Complete.”
 - Verify SENSOR CHECK completes.
5. Disconnect power cord from rear of monitor.
 - Verify ‘OPERATING ON BATTERY BACKUP’ is displayed.
 - Verify battery icon displays below BIS number.
 6. Reconnect power cord.
 - Verify battery icon is not displayed below BIS banner.
 - Verify ‘OPERATING ON BATTERY BACKUP’ is not displayed.
 7. End of checkout.

6.2.3 Checking the Battery

Check the battery periodically by operating a BIS VISTA monitor that has been disconnected from the wall socket and that has been charging the battery for at least 6 hours. If the monitor fails to operate reliably from the battery for approximately 45 minutes, battery replacement is required.

WARNING!

ELECTRICAL SHOCK HAZARD: DO NOT REMOVE MONITOR COVERS DURING OPERATION OR WHILE POWER IS CONNECTED TO MONITOR.

GROUND WIRE LEAKAGE CURRENT MUST BE CHECKED WHENEVER INSTRUMENT CASE IS OPENED BY A QUALIFIED BIOMEDICAL ENGINEERING TECHNICIAN.

Caution:

Check the battery periodically by operating a BIS VISTA monitor that has been disconnected from the wall socket and that has been charged to full capacity (at least 6 hours of charge time). After long periods of storage (e.g., more than 1 month) it may be necessary to cycle (charge, then discharge) the battery a few times to get full charge capacity. If the BIS VISTA monitor fails to operate reliably from the battery for approximately 45 minutes, battery replacement is required.

The BIS VISTA monitor contains an internal lithium ion battery. The battery must be removed by a qualified service technician and disposed of or recycled in accordance with the national laws of the country. Contact Aspect Medical Systems, Inc. or the local distributor for a replacement battery: Aspect part number 186-0208.

6.2.4 Replacing the Battery

To replace the battery, you will need a Philips #2 screwdriver. Follow the instructions below:

1. Unplug A/C line cord from the monitor.
2. Lay monitor screen-side-down on a scratch-free work surface so that the Battery/Power Supply cover is accessible.
3. Remove 4 screws from the Battery/Power Supply cover and remove the cover. Note the position of the battery cable.
4. Squeeze the battery connector latch to disengage it from the back of the monitor and remove the old battery.
5. Lay the new battery in the recess with the wires at the top, and plug in the connector.
6. Replace the cover and four screws (hand-tighten only) and reconnect the A/C power cord.

6.2.5 Replacing the Power Supply

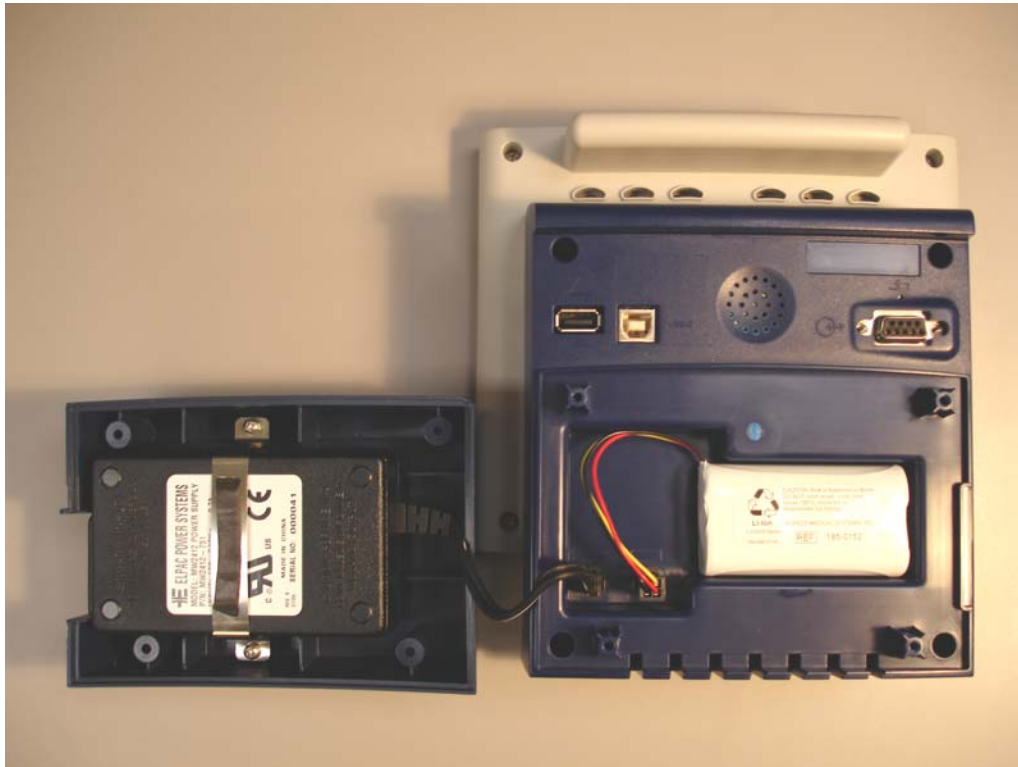


Figure 31 - Replacing the Power Supply

WARNING:

POWER SUPPLY IS INTERNALLY FUSED. REPLACE POWER SUPPLY ONLY WITH ASPECT MEDICAL SYSTEMS BIS VISTA POWER SUPPLY.

To replace the power supply, you will need a Philips #2 screwdriver. Follow the instructions below:

1. Unplug A/C line cord from the BIS VISTA monitor.
2. Lay the monitor screen-side-down on a scratch-free work surface so that the Battery/Power Supply cover is accessible.
3. Remove 4 screws from the Battery/Power Supply cover and remove the cover. The power supply is located inside the cover.
4. Unplug the battery connector.
5. Unscrew the power supply connector and remove the old power supply.
6. Screw in the new power supply connector and insert power supply into the cover, lining up the A/C power receptacle with the cutout in the cover.
7. Reconnect the battery.
8. Replace the cover and 4 screws (hand-tighten only) and reconnect the A/C power cord.

6.2.6 Checking Leakage Current

Leakage current is a primary indicator of electrical shock hazard to personnel making contact with any exposed outer surface of the equipment. Each BIS VISTA monitor is carefully checked at the factory to verify that leakage current meets the UL60601-1 and IEC60601-1-1 safety standards.

The BIS VISTA monitor should be checked routinely for leakage current at least once a year.

Always have the leakage current checked after a saline or blood spill, or immediately after a major surge in the house electrical system and after every time the monitor case has been opened.

Keep in mind that liquids such as saline and Ringer's as well as blood are all excellent conductors of electricity. Avoid touching any part of the system with wet hands. Always work with clean, dry hands.

WARNING!

ELECTRICAL SHOCK HAZARD: THE MANUFACTURER'S INSPECTION OF THIS APPARATUS VERIFIED THAT THE GROUND LEAKAGE CURRENT AND THE PATIENT SAFETY CURRENT WERE LESS THAN THE SPECIFIED LIMITS ESTABLISHED BY THE APPLICABLE SAFETY STANDARDS. AS A MATTER OF SAFE PRACTICE, THE INSTITUTION SHOULD CONDUCT PERIODIC TESTS TO VERIFY THESE CURRENTS. WHENEVER AN EVENT SUCH AS SPILLAGE OF BLOOD OR SOLUTIONS OCCURS, RE-TEST BEFORE FURTHER USE.

6.3 Technical Documentation

The BIS VISTA Monitoring System is designed and manufactured using state-of-the-art components and manufacturing processes. Field repair or customer repairs are therefore limited by design to replacement of major component assemblies such as: the Patient Interface Cable (PIC), BISx, the BIS VISTA Monitor itself, the battery, power supply and pole clamp. Periodic software upgrades are possible via the USB-A port.

This BIS VISTA Operating Manual contains the maintenance and diagnostic troubleshooting information necessary for customer qualified technical personnel to test and replace those parts of the equipment that are replaceable by the customer. Aspect does not authorize nor provide information to service or repair the internal components of the BIS VISTA monitor or the BISx.

6.4 Instrument Identification

BIS VISTA Monitor

Monitor identification information is permanently marked on the rear panel. This information includes instrument model and serial numbers, patent numbers, power ratings, cautions, and the Aspect Medical Systems' shipping address.

BISx

The BISx identification information is permanently marked on the rear panel of the BISx. The information includes instrument model and serial numbers, patent numbers, cautions, and the Aspect Medical Systems' shipping address.

Software Revision Numbers

Software revision numbers are displayed in the Configuration Information screen.

SECTION 7

7 DIAGNOSTICS AND TROUBLESHOOTING

INTRODUCTION

This section discusses:

- The Maintenance Menu
- The Diagnostic Menu
- BIS VISTA monitor messages and appropriate operator actions
- Resetting the system
- What to do if the BIS VISTA system requires service.

7.1 Maintenance Menu

The maintenance menu contains functions to test and maintain the BIS VISTA system, including the BISx, PIC, and sensors.

To display the Maintenance Menu:

1. Press **[MENU]** to access the menu options.
2. Press **[NEXT]** to proceed to the next menu.
3. Press **[NEXT]** to proceed to the third menu.
4. Press **[Maintenance Menu]**. The Maintenance Menu appears.

7.1.1 Display BISx Connection History

This option displays information on each BISx that has been connected to a specific monitor. The connection time, BISx serial number and BISx software revisions are displayed.

7.1.2 Software Upgrade

The BIS VISTA system software may be updated by attaching a software upgrade device to the USB port on the rear of the monitor. Follow these steps to perform the update:

Caution:

Do not disconnect the BISx during the software upgrade.

1. Before attempting an update, be sure to record your institution's saved settings, as they may be erased during the update procedure.
2. Insert the USB drive containing the software update into the USB port (Type A) at the rear of the monitor.
3. Press **[MENU]**, then **[Next]**, then **[Next]** again to get to the third menu.
4. Press **[Maintenance]** to reach the Maintenance Menu.
5. Press **[Software Upgrade]**. As soon as the updating device is detected, the message "Software Upgrade Device Detected" appears on the screen.

6. Press **[Continue]** to initiate the update. (To skip the update, Press **[Cancel]**. The monitor will operate with the current software.) The update begins. Do NOT remove the USB drive during the updating process.
7. When the update is complete, the message “Software Upgrade Complete” appears. Press **[RESET]**. The monitor and BISx will reset, and you can then resume normal operation.

7.1.3 Restore Default Settings for All Modes

This option resets all settings (for all Monitor Modes: I, II, III, and IV) to the original settings. The user is asked to confirm this request.

7.1.4 Calibrate Touch Screen

The Touch Screen is calibrated at the factory and does not need to be re-calibrated on a regular basis. However, if necessary, the touch screen may be calibrated by selecting **[Calibrate Touch Screen]** from the menu system. Follow the on-screen instructions.

7.2 The Diagnostic Menu

The Diagnostic Menu contains functions to test and maintain the BIS VISTA system. If you should experience a problem with the BIS VISTA system, Aspect’s Technical Service Department will direct you in using these functions. To contact Aspect, please refer to the back cover of this manual.

7.2.1.1 Diagnostic Codes



Figure 32 - Diagnostic Codes ON/OFF

If you are experiencing problems with the BIS VISTA system, Aspect’s Technical Service may direct you to turn the Diagnostic Codes ON so that numeric diagnostic values will be displayed in the Message Region of the screen. To do so, press the **[Diagnostic Codes]** touch key until a green box appears. Press **[HOME]** to exit.

7.2.1.2 DSC Self Test

The DSC Self Test tests the digital signal acquisition and conversion functions of the BISx. It is a thorough test of the entire signal processing chain. The DSC test reports PASS/FAIL status, noise, high-pass blocked, high-pass normal and gain values. If any of the self-tests fail, notify your Biomedical Engineering Department or your Aspect Medical Systems service representative. See Section 7.5 “What to do if the BIS VISTA System Requires Service.”

7.3 BIS VISTA System Messages and Corrective Actions

When an alarm is triggered, a message appears in the Message Region of the screen. Possible messages and the recommended operator actions are listed below:

BIS VISTA Messages and Operator Actions

Status Messages:	Causes:	Corrective Actions:
01 Connect BISx	<ol style="list-style-type: none"> 1. BISx disconnected. 2. Defective BISx cable. 3. Defective BISx. 4. Defective monitor. 	<ol style="list-style-type: none"> 1. Connect BISx. Verify all cable connections. 2. Inspect/repair cable at connector end. 3. Replace the BISx. 4. Replace monitor.
13 Re-prep Sensor	<ol style="list-style-type: none"> 1. Incorrect sensor application. 2. Poor sensor connections. 3. Sensor Check fails 4. Defective PIC. 5. Defective BISx. 	<ol style="list-style-type: none"> 1. Read Instructions on sensor package and re-prep sensor. 2. Check sensor connections. 3. Re-prep again or replace sensor. Verify Sensor Check passes. 4. Replace the PIC. 5. Replace BISx.
14 Sensor Disconnected	<ol style="list-style-type: none"> 1. Disconnected sensor. 2. Poor or contaminated connection between sensor and PIC. 3. Disconnected PIC. 4. Defective PIC. 5. Defective BISx. 	<ol style="list-style-type: none"> 1. Connect the sensor. 2. Connect/clean connection between sensor and PIC. 3. Connect the PIC. 4. Replace the PIC. 5. Replace the BISx.

Status Messages:	Causes:	Corrective Actions:
<p>16 Last Sensor Check Failed</p>	<ol style="list-style-type: none"> 1. At least one element of sensor has too high impedance, and EXIT pressed (before sensor check completes). 2. Incorrect sensor application. 3. Poor sensor connection. 4. Defective PIC. 5. Defective BISx. 	<ol style="list-style-type: none"> 1. Verify Sensor Check passes. 2. Read Instructions on sensor package and re-apply sensor. 3. Check sensor connection. 4. Replace the PIC. 5. Replace the BISx.
<p>27 Excessive Artifact Detected in Signal</p>	<p>The Signal Quality is less than half of the level desirable for optimal monitoring conditions. This may occur as the result of artifact such as those generated from motion or eyeblinks.</p> <ol style="list-style-type: none"> 1. Artifact, such as those generated by motion or eyeblinks, is causing loss of EEG recognition. 2. EMG Bar indicates electrical activity that may be interfering with EEG recognition. 3. PIC is defective. 4. BISx is defective. <p>Note: This message may occur as the results of artifact (non-EEG signal) such as those generated from motion (patient movement or eyeblinks) or the presence of electro-cautery, warming blankets, or other devices</p>	<ol style="list-style-type: none"> 1. If ARTIFACT label appears above the EEG waveform box, attempt to identify and eliminate artifact source. 2. If EMG bar is illuminated, attempt to determine and eliminate cause. 3. Verify Sensor Check passes. If not, replace PIC. 4. Replace BISx.

Status Messages:	Causes:	Corrective Actions:
<p>28 Data unavailable due to poor signal quality</p>	<p>The signal quality is too low to accurately calculate a BIS value. The BIS value and other trend variables that are adversely affected by artifact are not displayed</p> <ol style="list-style-type: none"> 1. Artifact, such as those generated by motion or eyeblinks, is causing loss of EEG recognition. 2. EMG Bar indicates electrical activity that may be interfering with EEG recognition. 3. PIC is defective. 4. BISx is defective. <p>Note: This message may occur as the results of artifact (non-EEG signal) such as those generated from motion (patient movement or eyeblinks) or the presence of electro-cautery, warming blankets, or other devices.</p>	<ol style="list-style-type: none"> 1. If ARTIFACT label appears above the EEG waveform box, attempt to identify and eliminate artifact source. 2. If EMG bar is illuminated, attempt to determine and eliminate cause. 3. Verify Sensor Check passes. If not, replace PIC. 4. Replace BISx.
<p>BIS Out of Target Range 29 – Low 30 – High</p>	<p>The BIS has fallen outside the target range set by the user.</p>	<ol style="list-style-type: none"> 1. Check patient. 2. Take note of BIS at limit set by user.
<p>31 Isoelectric EEG Detected</p>	<p>No discernible EEG activity is detected for several minutes; SR=100.</p> <p>Note: This message notifies user of a flatline EEG. This is a normal condition when Sensor Simulator or Test Sensor is connected.</p>	<p>If unintended:</p> <ol style="list-style-type: none"> 1. Check patient vital signs, dosage, etc. 2. Check leads for proper connection and possible shorts. 3. Verify Sensor Check passes. 4. Verify DSC Self-test passes. 5. Verify PIC. Use Test Sensor or Sensor Simulator and Sensor Check.

Status Messages:	Causes:	Corrective Actions:
33 Operating On Battery Backup	The AC power has been lost and the monitor is running on the battery. The battery keeps the monitor operating for approximately 45 minutes (when the battery is fully charged).	<ol style="list-style-type: none"> 1. Restore the AC power. 2. Verify power cord. 3. Verify AC fuses are good. 4. Replace power supply.
34 Battery Voltage Low	There are only a few minutes of battery life left.	Restore AC power to avoid automatic shutdown.
93 Sensor Positive Ground Fault 92 Sensor Negative Ground Fault	Problem is detected relating to sensor ground element.	<ol style="list-style-type: none"> 1. Disconnect and examine sensor connection. Clean any contamination present. 2. Replace sensor if necessary. 3. Replace PIC. 4. Replace BISx.
94 Sensor Overcurrent	Sensor is using too much current.	<ol style="list-style-type: none"> 1. Disconnect and examine sensor connection. Clean any contamination. 2. Replace sensor if necessary. 3. Replace PIC. 4. Replace BISx.
95 96 Sensor Invalid	<ol style="list-style-type: none"> 1. Poor or contaminated connection between sensor and PIC. 2. Defective sensor. 3. Defective PIC. 4. Defective BISx. 	<ol style="list-style-type: none"> 1. Connect/clean connection between sensor and PIC. 2. Replace the sensor. 3. Replace the PIC. 4. Replace the BISx.
1000-1999 Unrecoverable BISx Error	<ol style="list-style-type: none"> 1. Defective BISx. 2. Defective monitor. 	<ol style="list-style-type: none"> 1. Replace the BISx. 2. Replace the monitor.
2000-2999 System Error	A system error has occurred. The monitor may stop operating.	<ol style="list-style-type: none"> 1. Turn the monitor off, then on again. 2. Verify the software level. 3. Replace monitor.
3000-3999 Data Export Error	The data export was not successful.	<ol style="list-style-type: none"> 1. Make sure the removable drive is connected properly to the USB(A) port. 2. Check to see if drive is already full.

7.4 Using the Reset button

The Reset button is located on the back panel of the monitor. If necessary, the software can be reset by accessing this button with a ballpoint pen, paper clip or other similar tool.

7.5 What to do if the BIS VISTA Monitoring System Requires Service

Contact your local distributor to determine where servicing will occur. Aspect's Technical Service Department will assist you in isolating the problem to a specific component. Have the equipment available when you call so that you can supply the appropriate serial numbers and a detailed description of the problem. If it becomes necessary to return a unit directly to Aspect Medical Systems, follow the procedure below:

- Contact Aspect's Technical Service Department to obtain a Returned Materials Authorization (RMA) number. (The Technical Service phone number is printed on the back cover of this manual.) The RMA number must appear on the outside of the shipping container.
- Use the original shipping container, if available, or equivalent packaging to protect the product. Seal the package with plastic shipping tape rather than masking tape. Mark shipping or storage container FRAGILE.
- If the repair or replacement is covered by the warranty, Aspect will bear the costs of shipping the repaired or replacement product back to the user. All other shipping costs shall be paid by the user.

SECTION 8

8 APPENDIX I: MENUS, PROCESSED VARIABLES AND GLOSSARY

8.1 Menu Map

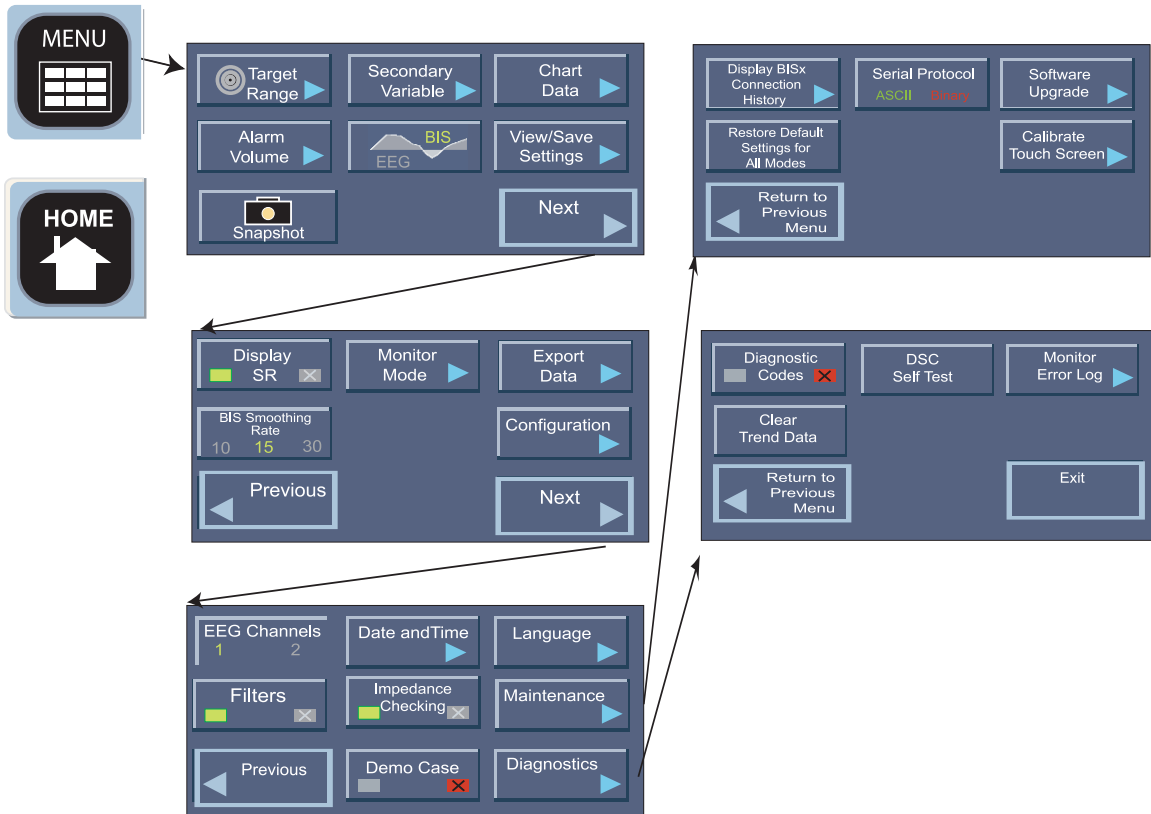


Figure 33 - BIS VISTA Menu Map

8.2 Menu Listing

Menu Item		Options	Default Value
Target Range	Target Range Active Target Alarm Target Range Format Target Range High (upper limit) Target Range Low (lower limit)	ON / OFF ON / OFF Band or Lines 5 - 100 0 - 95	OFF ON Band 100 (None) 0 (None)
Secondary Variable		None, Suppression Ratio, EMG	None
Chart Data	Charting Interval		15 minutes*
Alarm Volume		Sliding scale from Softer to Louder	SOFT
BIS/EEG Display Type		BIS or EEG	BIS
View/Save Settings			
Snapshot			
Display SR		ON / OFF	OFF*
Monitor Mode		I, II, III or IV	I
Export Data	Live Data History Data BISx Connection History Monitor Error Log Snapshot		
BIS Smoothing Rate		10, 15 or 30	15*

Configuration	Monitor: Serial number Software: Application Revision Application Checksum Platform Revision Host Protocol Revision BISx Protocol Revision Hardware Revision BISx: Serial Number Software Revision Software Checksum FPGA Revision SIC Revision Hardware Revision Protocol Revision Sensor: Lot Code: Serial Number Sensor Type		
EEG Channels		1 or 2	1
Date and Time			
Language		English French German Italian Spanish Portuguese Chinese Greek Polish Swedish Dutch	English
Filters		ON / OFF	ON
Impedance Checking		ON / OFF	ON
Maintenance	Display BISx Connection History Serial Protocol Software Upgrade Restore Default Settings for All Modes Calibrate Touch Screen	ASCII/Binary	
Demo Case		ON / OFF	OFF

Diagnostics	Diagnostic Codes DSC Self Test Monitor Error Log Clear Trend Data	ON / OFF	OFF
--------------------	--	----------	-----

***These values are for Monitor Mode I. For other modes, consult Figure 30 - Monitor Mode Settings.**

8.3 Processed EEG Variables

Variable Name	Description	Range
Bispectral Index (BIS)	The output from a multivariate discriminate analysis that quantifies the overall bispectral properties (frequency, power, and phase) throughout the entire frequency range.	0 – 100
Signal Quality Indicator (SQI)	A measure of the signal quality for the EEG channel source(s) that is calculated based on impedance data, artifact, and other variables. Not affected by Suppression Ratio.	0 – 100 20 points per bar
EMG	The absolute power in the 70-110 Hz range. The power value is reported in dB with respect to $0.0001\mu V^2$. All the artifact detection is turned off for this variable.	30 – 80 dB Trend 30 – 55 dB Bar Graph
Suppression Ratio (SR)	The percentage of epochs in the past 63 seconds in which the EEG signal is considered suppressed.	0 – 100 %
Burst Count	The number of EEG bursts per minute, where a “burst” is defined as a short period of EEG activity preceded and followed by periods of inactivity (suppression).	0 – 20

8.4 Glossary

Amplitude

The maximum absolute value reached by a voltage or current waveform.

Artifact

An electrical waveform with characteristics that arise from sources other than the heart or brain.

Bispectral Index

The Bispectral Index is a continuous processed EEG parameter that correlates to the patient's level of hypnosis, where 100=awake and 0=flat line EEG. BIS was designed to correlate with "hypnotic" clinical endpoints (sedation, lack of awareness, and memory) and to track changes in the effects of anesthetics on the brain.

BIS Sensor

A single patient use, disposable, pre-gelled 4 electrode array that is applied directly to the patient's forehead to record electrophysiological signals. The BIS sensor tab contains an electric smart card memory device that stores configuration and identification information.

Bispectral Analysis

The Bispectral Index is a continuous processed EEG parameter that correlates to the patient's level of hypnosis, where 100=awake and 0=flat line EEG. BIS was designed to correlate with "hypnotic" clinical endpoints (sedation, lack of awareness, and memory) and to track changes in the effects of anesthetics on the brain.

BISx

The BISx is the small unit that attaches to the BIS VISTA monitor via its own monitor cable, and attaches to a BIS sensor via the Patient Interface Cable (PIC). It acquires and processes EEG information and sends it to the monitor for display.

Burst Count

The number of EEG bursts per minute, where a "burst" is defined as a short period of EEG activity preceded and followed by periods of inactivity (suppression). The duration of bursts and suppressions can vary from less than half a second to several seconds.

Electroencephalogram (EEG)

A visual representation of the rhythmic fluctuations of electric potential between parts of the brain (brain waves).

Electromyelogram (EMG)

A visual representation of the power (in decibels) in the frequency range 70 – 110 Hz. This frequency range contains power from muscle activity as well as power from other high-frequency artifacts.

Epoch

A short interval of arbitrarily defined length.

Impedance

The measure of the quality of the sensor electrodes' contact. Impedance is the amount of resistance that the electrical current encounters. Impedance is continuously monitored to ensure adequate signal quality.

Isoelectric EEG

Electrocerebral silence (flat EEG) or no significant electrical activity in the brain. Specifically, periods >240 msec during which the electroencephalographic voltage did not exceed 5 [μ V].

Montage

Standardized electrode locations.

Patient Interface Cable (PIC)

The cable that connects the BIS sensor to the BIS hardware.

Signal Quality Indicator (SQI)

A measure of the signal quality for the EEG channel source that is calculated based on impedance data, artifact, and other variables.

Smoothing Rate

The rate over which the BIS value is averaged.

Suppression Ratio

A calculated parameter that indicates when an isoelectric (flatline) condition may exist. Suppression ratio is the percentage of time over the last 63-second period that the signal is considered to be in the suppressed state.

SECTION 9**9 APPENDIX**

9.1 Specifications

This section lists specifications for the BIS VISTA Monitoring System.

General Specifications:

- **Product Description:** BIS (Bispectral Index) monitoring system for display of processed data and real-time EEG waveforms
- **Monitor Weight:** 4.5 lbs (2 kg)
- **Monitor Dimensions:** 7.5 in wide x 8 in high x 5 in deep
(19 cm x 20.3 cm x 12.7 cm)
- **Display Size:** 4 in high x 5.25 in wide (10 cm x 13 cm)
- **Digital Output:** USB ports A, B, RS232 serial port
- **Power Requirements:** 100-240 VAC, 50-60 Hz, 0.7 ampere max.
- **Electrical Safety:** Conforms to: UL 60601-1, IEC 60601-2-26,
CAN/CSA-C22.2#601.1
- **Battery Backup:** 45 minutes at full operation
Recharge Time: 6 hours
- **Software Updates:** User-via USB port (Type A)

EEG Specifications:

- Epoch Duration: 2 seconds
- Artifact Rejection: Automatic
- EEG Scales: 25 $\mu\text{V}/\text{div}$ (+/- 1 mV Full Scale)
- EEG Sweep Speeds: 30 mm/sec
Display Type – EEG: 15, 25, or 30 mm/sec
- Computed Parameters: Bispectral Index, Suppression Ratio, EMG, Signal Quality Indicator, and Burst Count
- User-defined Displays: Trend and real-time EEG waveforms
- Update Rate: 1 second for BIS number, 10 seconds for Trend
- Event Markers: User selected
- Alarms: Auditory and visual, user adjustable limits
- Filters: ON (2 – 70 Hz with notch) or OFF (.25 – 100 Hz)
- Mode: Sensor automatically selects mode.

BISx Specifications:

- BISx:
 - Weight: 10.0 oz (0.284 kg) including integral cable
 - Dimensions: 2.6 in wide x 1.00 in high x 4.25 in deep
(6.6 cm x 2.5 cm x 10.8 cm)
 - Cable Length: 9 ft (2.7 m) Integral BISx Cable
4 ½ ft (1.4 m) from BISx to sensor connector

- Analog to Digital Converter: Noise-shaped sigma-delta

- Sampling Rate: 16,384 samples/second

- Resolution: 16 Bits at 256 samples/second

- Input Impedance: 50 Mohms typical

- Noise: < 0.3 μ V RMS (2.0 μ V peak-to-peak);
0.25 Hz to 50 Hz

- Common Mode Rejection:
(Isolation mode) 110 dB at 50/60 Hz to earth
ground

- Frequency/Bandwidth: 0.16 – 450 Hz

Type of Protection against Electric Shock of the System:

Class 1: Equipment in which protection against electric shock does not rely on basic insulation only, but which includes an additional safety precaution. Means are provided for the connection of the equipment to the protective earth conductor in the fixed wiring of the installation in such a way that accessible metal parts cannot become live in the event of a failure of the basic insulation.

Degree of Protection against Electric Shock of the System:

Type BF: Equipment providing a degree of protection against electric shock regarding allowable leakage currents and reliability of the protective earth ground connection with an F-type applied part. An F-type applied part is isolated from all other parts of the equipment to such a degree that the patient leakage current allowable in single fault condition is not exceeded when a voltage equal to 1.1 times the highest rated AC supply voltage is applied between the applied part and earth. The circuitry inside the BIS VISTA monitor is isolated from the mains in accordance with UL60601-1. Patient isolation is accomplished within the BISx.

Degree of Protection against effects of Cardiac Defibrillation:

The BIS VISTA system provides protection for the operator and patient during cardiac defibrillation. This protection is achieved via the isolation barrier within the BISx.

Degree of Protection against the Ingress of Water:

Monitor degree of protection rating: IPX2 (ingress of water vertically dripping).
BISx degree of protection rating: IPX4 (splash proof).

Mode of Operation of the System:

Continuous: Operation under normal load for a normal period without exceeding the specified limits of temperature.

Classification:

MEDICAL ELECTRONIC EQUIPMENT

CLASSIFIED BY UNDERWRITERS LABORATORIES INC.® WITH RESPECT TO
ELECTRIC SHOCK, FIRE AND MECHANICAL HAZARDS ONLY IN
ACCORDANCE WITH UL 60601-1, IEC 60601-1, IEC 60601-2-26,
CAN/CSA-C22.2#601.1.

9.2 Electromagnetic Compatibility Specifications

The BIS VISTA Monitoring System requires special precautions regarding Electromagnetic Compatibility (EMC). The BIS VISTA system must be installed and put into service according to the EMC guidance information provided in this section.

Portable and mobile radio frequency communications equipment can affect the operation of the BIS VISTA Monitoring System. Refer to the EMC guidance information and Cautions provided in this manual.

9.2.1 Accessories

The BIS VISTA Monitoring System complies with the requirements of IEC 60601-1-2:2001 when used with the accessories listed in Section 2 of the Operating Manual. In addition, the BIS VISTA system must be used only with the power cord provided.

When using the Software Upgrade Device to load new versions of software into the BIS VISTA monitor, no cables or other accessories should be connected to the device. The BIS VISTA monitor should be connected to the mains through the appropriate power cord, and the Software Upgrade Device should be plugged into the USB-A connector on the back of the device.

Caution:

Using accessories other than those specified may result in increased electromagnetic emissions or decreased electromagnetic immunity of the BIS VISTA Monitoring System.

9.2.2 IEC 60601-1-2:2001 Electromagnetic Compatibility Guidance

This section provides the appropriate specification tables for the BIS VISTA Monitoring System as per IEC 60601-1-2.

Guidance and Manufacturer's Declaration - Electromagnetic Emissions

The BIS VISTA Monitoring System is intended for use in the electromagnetic environment specified below. The customer or user of the BIS VISTA system should assure that it is used in such an environment		
Emissions test	Compliance	Electromagnetic Environment - Guidance
RF Emissions CISPR 11	Group 1	The BIS VISTA system uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF Emissions CISPR 11	Class A	The BIS VISTA system is suitable for use in all establishments, other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic Emissions IEC 61000-3-2	Class A	
Voltage Fluctuations/ Flicker Emissions IEC 61000-3-3	Complies	

Caution:


The BIS VISTA system should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the BIS VISTA Monitor should be observed to verify normal operation in the configuration in which it will be used.

Guidance and Manufacturer's Declaration - Electromagnetic Immunity

The BIS VISTA system is intended for use in the electromagnetic environment specified below. The customer or user of the BIS VISTA system should assure that it is used in such an environment			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	± 6 kV contact ± 8 kV air	± 6 kV contact ± 8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC 61000-4-4	± 2 kV for power supply lines. ± 1 kV for input/output lines.	± 2 kV for power supply lines. ± 1 kV for input/output lines.	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	± 1 kV differential mode ± 2 kV common mode	± 1 kV differential mode ± 2 kV common mode	Mains power quality should be that of a typical hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines. IEC 61000-4-11	<5% UT (>95% dip in UT) for 0.5 cycle. 40% UT (60% dip in UT) for 5 cycles. 70% UT (30% dip in UT) for 25 cycles. <5% UT (>95% dip in UT) for 5 sec.	<5% UT (>95% dip in UT) for 0.5 cycle. 40% UT (60% dip in UT) for 5 cycles. 70% UT (30% dip in UT) for 25 cycles. <5% UT (>95% dip in UT) for 5 sec.	Mains power quality should be that of a typical hospital environment. If the user of the BIS VISTA system requires continued operation during power mains interruptions longer than 45 minutes, it is recommended that the BIS VISTA Monitor be powered by an uninterruptible power supply or an additional battery.
Power frequency (50/60 Hz) magnetic field. IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of typical location in a typical hospital environment.
NOTE: UT is the AC mains voltage prior to the application of the test level.			

Guidance and Manufacturer's Declaration - Electromagnetic Immunity

The BIS VISTA Monitoring System is intended for use in the electromagnetic environment specified below. The customer or user of the BIS VISTA system should assure that it is used in such an environment.

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment - Guidance
<p>Conducted RF IEC 61000-4-6</p> <p>Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150 kHz to 80 MHz</p> <p>3 V/m 80 MHz to 2.5 GHz</p>	<p>3 V</p> <p>3 V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the BIS VISTA system, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance</p> $d = 1.2\sqrt{P}$ $d = 1.2\sqrt{P}, \text{ 80 MHz to 800 MHz}$ $d = 2.3\sqrt{P}, \text{ 800 MHz to 2.5 GHz}$ <p>where P is the maximum output power rating of the transmitter in watts according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by electromagnetic site survey^a, should be less than the compliance level in each frequency range.^b Interference may occur in the vicinity of equipment marked with the following symbol:</p> <div style="text-align: center;">  </div>

NOTE 1: At 80 MHz and 800 MHz, the higher frequency range applies.

NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

^a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the BIS VISTA system is used exceeds the applicable RF compliance level above, the BIS VISTA system should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the BIS VISTA system

^b Over the frequency ranges 150kHz to 80 MHz field strength should be less than 3 V/m.

Recommended Separation Distances between Portable and Mobile RF Communications Equipment and the BIS VISTA Monitor

The BIS VISTA Monitoring System is intended for use in the electromagnetic environment in which radiated RF disturbances are controlled. The customer or user of the BIS VISTA system can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the BIS VISTA system as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of equipment W	Separation distance according to frequency of transmitter m		
	150 kHz to 80 MHz $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2.5 GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be determined using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1: At 80 MHz and 800 MHz, the separation distance for the higher frequency ranges applies.

NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.

9.3 Warranty

Aspect warrants to the initial Purchaser that the BIS VISTA monitor and the BISx (“Warranted Product”) will be free from defects in workmanship or materials, when given normal, proper, and intended usage for a period of one year (“Warranty Period”) from the date of its initial shipment to Purchaser. Excluded from this warranty are expendable components and supply items such as, but not limited to, electrodes, cables, and prep solutions. Aspect’s obligations under this warranty are to repair or replace any Warranted Product (or part thereof) that Aspect reasonably determines to be covered by this warranty and to be defective in workmanship or materials provided that the Purchaser has given notice of such warranty claim within the Warranty Period and the Warranted Product is returned to the factory with freight prepaid. Repair or replacement of Products under this warranty does not extend the Warranty Period.

To request repair or replacement under this warranty, Purchaser should contact Aspect directly (see contact information on the back cover of this manual). Aspect will authorize Purchaser to return the Warranted Product (or part thereof) to Aspect. Aspect shall determine whether to repair or replace Products and parts covered by this warranty and all Products or parts replaced shall become Aspect’s property. In the course of warranty service, Aspect may but shall not be required to make engineering improvements to the Warranted Product or part thereof. If Aspect reasonably determines that a repair or replacement is covered by the warranty, Aspect shall bear the costs of shipping the repaired or replacement Product to Purchaser. All other shipping costs shall be paid by Purchaser. Risk of loss or damage during shipments under this warranty shall be borne by the party shipping the Product. Products shipped by Purchaser under this warranty shall be packaged in the original shipping container or equivalent packaging to protect the Product. If Purchaser ships a Product to Aspect in unsuitable packaging, any physical damage present in the Product on receipt by Aspect (and not previously reported) will be presumed to have occurred in transit and will be the responsibility of Purchaser.

This warranty does not extend to any Warranted Products or part thereof: that have been subject to misuse, neglect, or accident; that have been damaged by causes external to the Warranted Product, including but not limited to failure of or faulty electrical power; that have been used in violation of Aspect’s instructions; that have been affixed to any nonstandard accessory attachment; on which the serial number has been removed or made illegible; that have been modified by anyone other than Aspect; or that have been disassembled, serviced, or reassembled by anyone other than Aspect, unless authorized by Aspect. Aspect shall have no obligation to make repairs, replacements, or corrections which result, in whole or in part, from normal wear and tear. Aspect makes no warranty (a) with respect to any products that are not Warranted Products, (b) with respect to any products purchased from a person other than Aspect or an Aspect-authorized distributor or (c) with respect to any product sold under a brand name other than Aspect Medical Systems, Inc.

THIS WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY FOR ASPECT'S PRODUCTS, EXTENDS ONLY TO THE PURCHASER, AND IS EXPRESSLY IN LIEU OF ANY OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING WITHOUT LIMITATION ANY WARRANTY AS TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ASPECT'S MAXIMUM LIABILITY ARISING OUT OF THE SALE OF THE PRODUCTS OR THEIR USE, WHETHER BASED ON WARRANTY, CONTRACT, TORT, OR OTHERWISE, SHALL NOT EXCEED THE ACTUAL PAYMENTS RECEIVED BY ASPECT IN CONNECTION THEREWITH. ASPECT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL LOSS, DAMAGE OR EXPENSE (INCLUDING WITHOUT LIMITATION LOST PROFITS) DIRECTLY OR INDIRECTLY ARISING FROM THE SALE, INABILITY TO SELL, USE OR LOSS OF USE OF ANY PRODUCT. EXCEPT AS SET FORTH HEREIN, ALL PRODUCTS ARE SUPPLIED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED.

9.4 Software License Agreement

The computer software (“Licensed Software”) loaded on the BIS VISTA monitor (“System”) is licensed, not sold, to you for use only under the terms of this license. Aspect Medical Systems, Inc. (“Aspect”) reserves any rights not expressly granted to you. You own the System, but Aspect retains all ownership rights and title to the Licensed Software itself.

1. **LICENSE:** You are hereby granted the non-exclusive right to use the Licensed Software solely with the specific System on which the Licensed Software was provided to you.
2. **RESTRICTIONS:** You shall not transfer the Licensed Software in any manner from the System to any other computer or system without the prior written consent of Aspect. You shall not distribute copies of the Licensed Software or its related documentation to others. You shall not modify or translate the Licensed Software or its related documentation without the prior written consent of Aspect. The Licensed Software contains trade secrets and to protect them you may not decompile, reverse engineer, disassemble, or otherwise reduce the Licensed Software to a human-perceivable form. If you transfer the System, you have the right to transfer the Licensed Software provided that the transferee agrees to be bound by the terms and conditions of this License Agreement.
3. **TERMINATION:** This License remains effective until terminated. This License will terminate automatically without notice from Aspect if you fail to comply with any term or provision of this License. Upon termination of this License, you may not make any further use of the Licensed Software.
4. **LIMITED WARRANTY:** THE LICENSED SOFTWARE IS PROVIDED “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY WITH RESPECT TO ITS MERCHANTABILITY OR ITS FITNESS FOR ANY PARTICULAR PURPOSE. ASPECT DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR FREE OR THAT SUCH ERRORS IN THE LICENSED SOFTWARE WILL BE CORRECTED.
5. **LIMITATION OF REMEDIES AND DAMAGES:** ASPECT’S ENTIRE LIABILITY TO YOU FOR ACTUAL DAMAGES FOR ANY CAUSE WHATSOEVER, AND REGARDLESS OF THE FORM OF THE ACTION, AND YOUR EXCLUSIVE REMEDY SHALL BE LIMITED TO THE MONEY PAID FOR THE SYSTEM, WHICH INCLUDED THE LICENSED SOFTWARE.

IN NO EVENT SHALL ASPECT BE LIABLE TO YOU (I) FOR ANY INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OF OR INABILITY TO USE ANY LICENSED SOFTWARE EVEN IF ASPECT OR ANY AUTHORIZED ASPECT REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR (ii) FOR ANY CLAIM BY ANY OTHER PARTY.

6. **GENERAL:** This License Agreement will be construed under the laws of the Commonwealth of Massachusetts. If any provision of this License Agreement shall be held by a court of competent jurisdiction to be contrary to law, that provision will be enforced to the maximum extent permissible, and the remaining provisions of this Agreement will remain in full force and effect.

Should you have any questions concerning this License Agreement, you may contact Aspect by writing to Aspect Medical Systems, Technical Service, at the address listed on the back cover of this manual.

THIS LICENSE AGREEMENT IS THE COMPLETE AND EXCLUSIVE STATEMENT OF THE AGREEMENT BETWEEN YOU AND ASPECT AND SUPERSEDES ANY PROPOSAL OR PRIOR AGREEMENT, ORAL OR WRITTEN, AND ANY OTHER COMMUNICATIONS BETWEEN YOU AND ASPECT RELATING TO THE SUBJECT MATTER OF THIS AGREEMENT.

9.5 List of Patents

4,907,597 (US)

5,010,891 (US); (Europe 0 468 999; Australia 638,708; Canada 2,051,683; Japan 3,136,408)

5,320,109 (US); (Europe 0 610 365, 0 898 234; Canada 2,122,032)

5,368,041 (US); (Europe 0 665 728)

5,381,804 (US); (Europe 0 738 496)

5,458,117 (US); (Europe 0 764 001)

5,792,069 (US); (Europe 0 957 761; Australia 732,539)

6,032,072 (US); (Europe 0 971 628; Australia 757,564)

6,882,166 (US)

European patents may include those in each of the following countries; Austria, Belgium, France, Germany, Spain, Switzerland and the United Kingdom.



Contact Information for:

Aspect Medical Systems, Inc.

141 Needham St.
Newton, MA 02464
U.S.A.

Main Business Phone: (617) 559-7000
Main Business Fax: (617) 559-7400
Customer Service: (888) BIS-INDE(X)...press (6), or
(800) 442-7688 ... press (6)
Technical Service: (800) 442-2051

Email: bis_info@aspectms.com
Web: www.aspectmedical.com

Aspect Medical Systems International B.V.

Rijnzathe 7d2
3454 PV De Meern
The Netherlands

Main Business Phone: +31.30.662.9140
Main Business Fax: +31.30.662.9150
Email: amsint@aspectms.com

